
manuale d'uso

dimmer

PUSH-4CV PUSH-4CV-DIN

-
- DESCRIZIONE E SPECIFICHE TECNICHE
 - MODALITÀ DI FUNZIONAMENTO
 - INGRESSO PUSH 4 CANALI
 - CAMBIO MODALITÀ
 - CONFIGURAZIONE PARAMETRI

PUSH-4CV / PUSH-4CV-DIN

Ingresso PUSH

Uscita tensione costante PWM

CARATTERISTICHE TECNICHE

- Dimmer da barra DIN quattro uscite separate monocromatiche con ingresso PUSH
- **Led di segnalazione corretta alimentazione**
- **N° 4 Led di segnalazione dello stato dell'uscita**
- **Possibilità di test al banco tramite SETUPPER opzionale**
- Morsetti alimentazione 0,2÷2,5mm² (24÷12 AWG)
- Morsetti ingressi di segnale 0,05÷1,5mm² (30÷14 AWG)
- Frequenza PWM: 390Hz
- Protezione da: inversione polarità, circuito aperto, picchi di tensione, sovratemperatura
- Corrente di uscita da 0A a 8A (384W a 48V)
- Canali di uscita parallelizzabili
- Controllabile tramite app Android/iOS Newlab Go con differenti modalità: Monocanale, RGB, RGB + White, Bianco dinamico
- Funzionalità MASTER/SLAVE per sincronia digitale con altri Dimmer Newlab o dispositivi DMX512A compatibili
- Circuito Stampato UL
- Conversione prodotto, impostazioni e modalità di funzionamento diverse da quelle di fabbrica sono impostabili tramite interfaccia cod. **SETUPPER**, venduta separatamente (DMX-4CV / DMX-CV-HP / DALI-4CV / DALI-CV-HP / PUSH-4CV / PUSH-CV-HP / POT-4CV / PUSH-4CV-SHOW / PUSH-SHOW-DMX e corrispondenti versioni -DIN)


AVVERTENZE DI SICUREZZA

- Intervento termico: 150° C su uC.
- Temperatura stoccaggio min: -40° C, max: 60° C
- Temperatura di funzionamento min: -20, max: 50° C
- Classe di protezione: IP20
- Utilizzare solo in ambienti asciutti
- Per le modalità di funzionamento che prevedono l'ingresso pulsante: se la tensione di controllo dell'ingresso PUSH è superiore alla tensione SELV è necessario l'utilizzo del coprimorsetto/stringicavo opzionale per mantenere il prodotto in classe II
- Per le modalità di funzionamento che prevedono l'ingresso analogico 0-10 (1-10V): questo circuito di controllo non è isolato, utilizzare solo un generatore di segnale isolato 0-10V(1-10V)


PUSH-4CV



71x90x32,2 mm

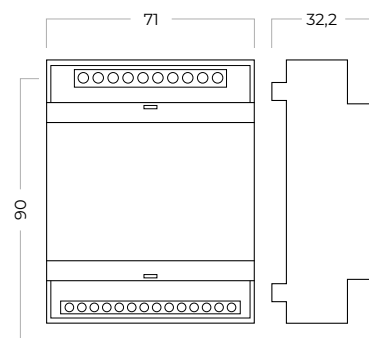

PUSH-4CV-DIN

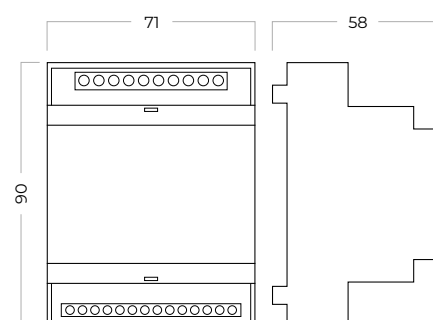71x90x58 mm
peso: 98 gr

CODICE	RANGE DI ALIMENTAZIONE	CORRENTE PER USCITA	POTENZA PER USCITA	USCITE	COMANDO	TIPO DI CARICO	PART NUMBER
PUSH-4CV	8÷53 V DC	8A	384W a 48V 192W a 24V 96W a 12V	4	PUSH / Bluetooth per altre modalità (DALI / DMX512A RDM / POT / 010V) acquistare SETUPPER	monocolore tunable white rgb rgbw	L406MA0GT4A05
PUSH-4CV-DIN							L406MA02T4A05



Manutenzione: l'apparecchio è privo di manutenzione. Per la sua pulizia adoperare un panno asciutto. È assolutamente da evitare l'utilizzo di solventi o altre sostanze aggressive.



Smaltimento: il prodotto descritto nella presente scheda tecnica al termine della sua vita utile è classificato come rifiuto proveniente da apparecchiature elettroniche secondo la Direttiva Europea 2012/19/UE (rifusione RAE), recepita in Italia con il D.Lgs. n.49 del 14 marzo 2014, e non può essere conferito tra i rifiuti solidi urbani indifferenziati. Importante: Lo smaltimento non corretto del prodotto può causare gravi danni all'ambiente e alla salute umana. Per il corretto smaltimento informarsi sulle modalità di raccolta e trattamento previste dalle autorità locali.

Modalità di funzionamento

Ingresso PUSH (non isolato) 4 canali indipendenti + Bluetooth

In questa modalità è possibile controllare i 4 canali di uscita mediante la pressione di 4 tasti NO connessi come in **figura**.

Funzionamento interfaccia PUSH (P1, P2, P3, P4)

Singolo Click (pressione rapida <1sec)

- Accende o spegne l'output (ON/OFF)

Doppio Click (pressione rapida <1sec)

- Imposta massima luminosità (output= 100%)

Long Press (pressione prolungata >1sec)

- Se il dimmer è in stato di OFF, imposta l'output al valore di minimo (default= 1%)
- Se il dimmer è in stato di ON, la pressione prolungata permette il dimming dell'output (salita/discesa)

Il pulsante P5 (da collegare opzionalmente) connesso ai poli DALI/P1 e DALI/P2 può essere collegato ad una tensione da 10VDC a 250VAC, la pressione rapida di tale pulsante comporta lo spegnimento e l'accensione di tutti i canali contemporaneamente.

Tale utilizzo è utile quando il dimmer non viene controllato dai pulsanti fisici P1, P2, P3 e P4 ma solo tramite bluetooth e con il pulsante P5 isolato collegato a DALI/P1 e DALI/P2 viene solo fatta l'accensione e lo spegnimento dello stesso.

In questa modalità lo stato del canale di uscita viene inviato anche sul bus DMX512/ RDM sui canali fissi 1-2-3-4:


Primo device DALI → DMX512 ADDRESS 1

Secondo device DALI → DMX512 ADDRESS 2

Terzo device DALI → DMX512 ADDRESS 3

Quarto device DALI → DMX512 ADDRESS 4

In questa modalità è anche possibile, controllare il dispositivo mediante smartphone attraverso l'**APP Newlab Go**. Riferirsi alla pagina seguente per dettagli sull'installazione ed uso dell'app.

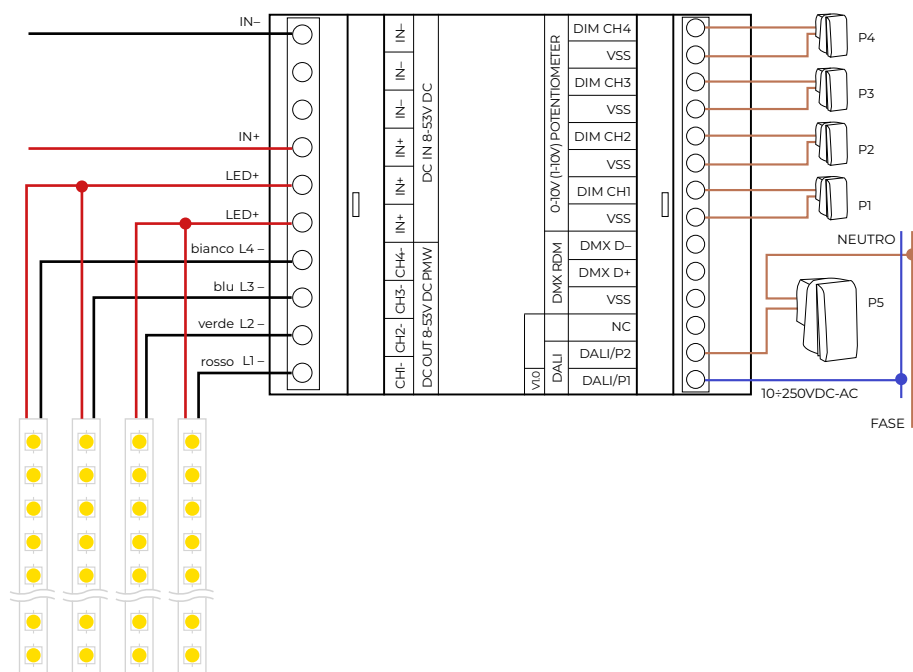

PARAMETRI CONFIGURABILI	SÌ	NO
RESET*	✓	
CURVA DI DIMMING	✓	
FADE	✓	
CAMBIO MODALITÀ	✓	
INDIRIZZO DMX		✓

*RESET: dopo il reset il dimmer torna nella modalità DMX-4CV / DMX-4CV-DIN; è quindi necessario riprogrammare anche la modalità di funzionamento desiderata

per il cambio dei parametri fare riferimento alle tabelle in appendice

Cambio modalità Setupper

Il Dimmer può essere configurato in diverse modalità operative.

La programmazione della modalità operativa, oltre che quella di altri parametri di funzionamento (es. indirizzo DMX-512, fade, etc.), deve essere effettuata mediante il programmatore opzionale **SETUPPER**.

Nelle pagine seguenti sono indicate le modalità supportate dal dimmer.

Il programmatore di parametri **SETUPPER** è una interfaccia di programmazione, acquistabile separatamente, che permette il passaggio di parametri e configurazioni ai dimmer Newlab.


Il **SETUPPER** è dotato di due blocchi di Dip Switches. Il primo blocco, contrassegnato dalle lettere A, B, C e D identifica il comando "Parametro". Il secondo blocco, contraddistinto dai numeri da 1 a 10, identifica il valore del parametro.

Il pulsante onboard serve per avviare la procedura di programmazione.

Il LED POWER indica la corretta alimentazione del **SETUPPER**;

Il LED CHECK conferma l'avvenuta programmazione del comando/parametro.


Il **SETUPPER** è alimentabile tramite batterie ministilo AAA oppure con dimmer alimentato (è consigliato rimuovere le batterie stesse in caso di utilizzo con dimmer alimentati).

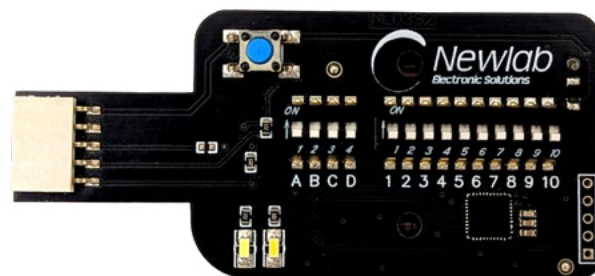


PROCEDURA DI IMPOSTAZIONE PARAMETRI/COMANDI

- 1) Impostare i Dip Switches del **SETUPPER** come da indicazioni del manuale del prodotto.
- 2) Inserire il **SETUPPER** nella strip 5 poli presente sul prodotto rispettando la polarità.
- 3) In caso di alimentazione tramite DIMMER (senza batterie AAA), controllare che il **LED POWER** sia acceso.
- 4) Premere e tenere premuto il pulsante PUSH:
 - in caso di alimentazione tramite dimmer, attendere fino a che il LED CHECK si accende. Entrambi i led accesi confermano l'avvenuta programmazione del parametro.
 - in caso di alimentazione tramite batteria, il LED POWER si accende e dopo qualche secondo si accende anche il LED CHECK. Entrambi i led accesi confermano l'avvenuta programmazione del parametro.
- 5) Spegnerne e riaccendere il dimmer.

Ripetere le operazioni descritte per ogni parametro che si vuole impostare sul dimmer.

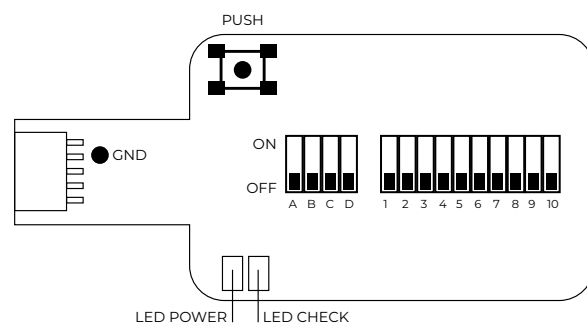


DIMMER

 


- 1) Aiutarsi con un cacciavite per rimuovere la base inferiore della scatola.
- 2) Rimuovere la scheda dalla scatola.
- 3) Inserire il SETUPPER sulla strip 5 poli presente sul dimmer rispettando la polarità.
- 4) Effettuare la programmazione della modalità o dei parametri.
- 4) Rimuovere il SETUPPER, reinserire la scheda all'interno della scatola e richiuderla rispettando il verso di rotazione della scatola e relativa etichetta.

DIMMER -DIN

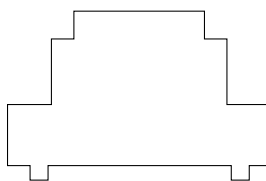

- 1) Aiutarsi con un cacciavite per rimuovere il pannellino superiore.
- 2) Inserire il SETUPPER sulla strip 5 poli presente sul dimmer rispettando la polarità.
- 3) Effettuare la programmazione della modalità o dei parametri.
- 4) Rimuovere il SETUPPER e richiudere il pannellino superiore rispettando il verso di rotazione del pannello e la relativa etichetta.

nb: Assicurarsi che i due punti GND siano dallo stesso lato

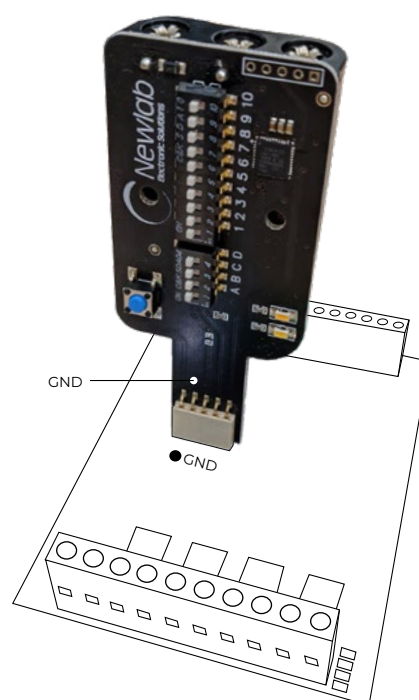

Trasformazione della modalità di funzionamento in:
ingresso SLAVE DMX-512/RDM 4 canali (cod. DMX-4CV / DMX-4CV-DIN)

CAMBIO MODALITÀ TRAMITE SETUPPER														
CONFIGURAZIONI	A	B	C	D	1	2	3	4	5	6	7	8	9	10
Ingresso Slave DMX-512/RDM 4 Canali	OFF	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
In alternativa acquistare il codice DMX-4CV / DMX-4CV-DIN già preconfigurato in questa modalità di funzionamento.														

In questa modalità il dispositivo può essere controllato mediante un bus DMX-512/RDM.

Il dispositivo occupa 4 canali DMX-512/RDM, a partire dall'indirizzo di base.
L'indirizzo DMX di base (DEFAULT 1) può essere impostato tramite protocollo RDM oppure utilizzando il programmatore (opzionale) SETUPPER.
In questa modalità il dispositivo lavora in curva lineare e la funzionalità FADE è disabilitata come da standard DMX-512.




ATTENZIONE: per il corretto funzionamento del BUS DMX è necessario collegare tra loro i poli GND dei dispositivi connessi al BUS.
Utilizzare il morsetto VSS come in **figura**.
Il mancato allineamento dei poli GND/VSS potrebbe portare a sfarfallii e lampeggi del dimmer o di altri dispositivi collegati al bus DMX512 e in casi particolari al danneggiamento degli stessi.

nb: in questa modalità il controllo BLE (Bluetooth) è inibito

PARAMETRI CONFIGURABILI	SI	NO
RESET*	✓	
CURVA DI DIMMING		✓
FADE		✓
CAMBIO MODALITÀ	✓	
INDIRIZZO DMX	✓	

*RESET: dopo il reset il dimmer torna nella modalità DMX-4CV / DMX-4CV-DIN; è quindi necessario riprogrammare anche la modalità di funzionamento desiderata

per il cambio dei parametri fare riferimento alle tabelle in appendice

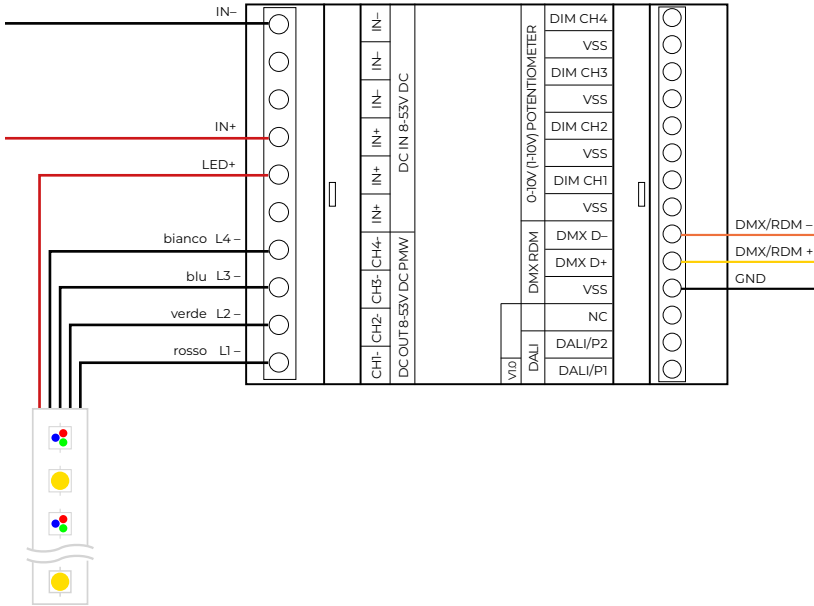

Trasformazione della modalità di funzionamento di default in: ingresso SLAVE DMX-512/RDM 4 canali con possibilità di settaggio parametri

CAMBIO MODALITÀ TRAMITE SETUPPER														
CONFIGURAZIONI	A	B	C	D	1	2	3	4	5	6	7	8	9	10
Ingresso Slave DMX-512/RDM 4 canali con possibilità di settaggio parametri	OFF	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON

In questa modalità il dispositivo può essere controllato mediante un bus DMX-512/RDM.

Il dispositivo occupa 4 canali DMX-512/RDM, a partire dall'indirizzo di base.


L'indirizzo DMX di base (DEFAULT 1) può essere impostato mediante protocollo RDM oppure mediante il programmatore SETUPPER (opzionale).

In questa modalità è inoltre possibile selezionare la curva di risposta del dispositivo (LOG o LIN) ed abilitare o disabilitare il FADE HW.

⬇

ATTENZIONE: per il corretto funzionamento del BUS DMX è necessario collegare tra loro i poli GND dei dispositivi connessi al BUS. Utilizzare il morsetto VSS come in **figura**.

nb: in questa modalità il controllo BLE (Bluetooth) è inibito

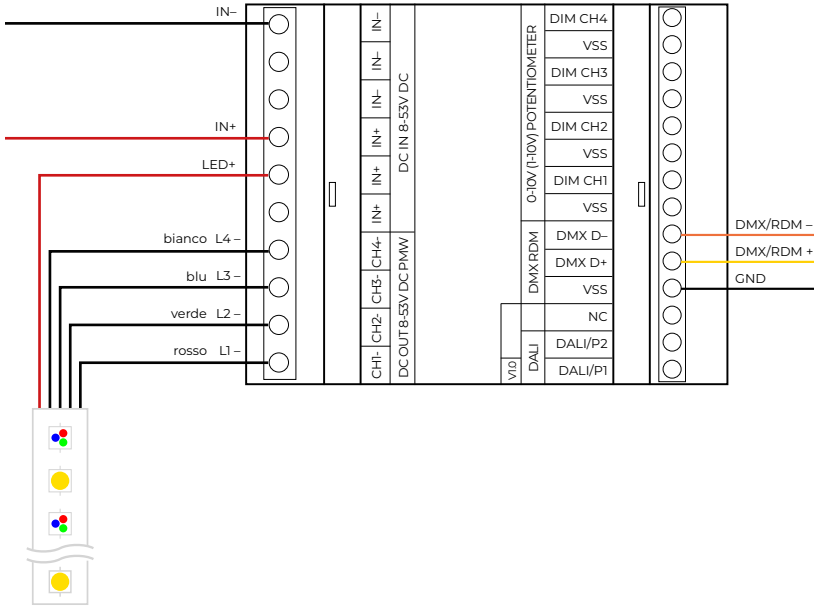

PARAMETRI CONFIGURABILI	SI	NO
RESET*	✓	
CURVA DI DIMMING	✓	
FADE	✓	
CAMBIO MODALITÀ	✓	
INDIRIZZO DMX	✓	

*RESET: dopo il reset il dimmer torna nella modalità DMX-4CV / DMX-4CV-DIN; è quindi necessario riprogrammare anche la modalità di funzionamento desiderata

per il cambio dei parametri fare riferimento alle tabelle in appendice

Trasformazione della modalità di funzionamento di default in: Ingresso SLAVE DMX-512/RDM monocanale (cod. DMX-CV-HP / DMX-CV-HP-DIN)

CAMBIO MODALITÀ TRAMITE SETUPPER														
CONFIGURAZIONI	A	B	C	D	1	2	3	4	5	6	7	8	9	10
Ingresso Slave DMX-512/RDM monocanale	OFF	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF
In alternativa acquistare il codice DMX-CV-HP / DMX-CV-HP-DIN già preconfigurato in questa modalità di funzionamento.														

In questa modalità il dispositivo può essere controllato mediante un BUS DMX-512/RDM con funzionalità monocanale.

Il dispositivo occupa 1 canale DMX-512/RDM e in questa modalità è in grado di gestire fino a 32A complessivi.

L'indirizzo DMX di base (DEFAULT 1) può essere impostato mediante protocollo RDM oppure mediante il programmatore SETUPPER (opzionale).


In questa modalità il dispositivo lavora in curva lineare e la funzionalità FADE è disabilitata.

↓

ATTENZIONE: per il corretto funzionamento del BUS DMX è necessario collegare tra loro i poli GND dei dispositivi connessi al BUS.

Utilizzare il morsetto VSS come in **figura**.

nb: in questa modalità il controllo BLE (Bluetooth) è inibito

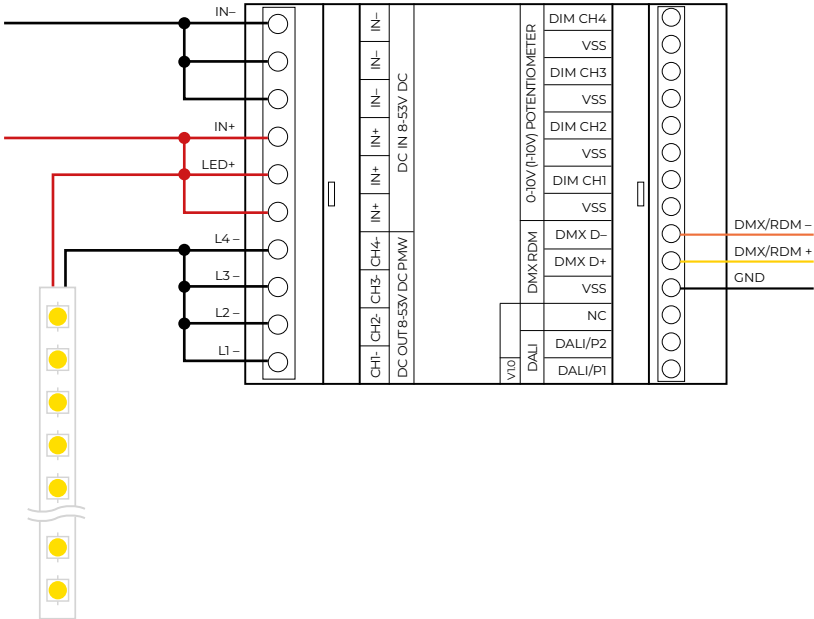

PARAMETRI CONFIGURABILI	SI	NO
RESET*	✓	
CURVA DI DIMMING		✓
FADE		✓
CAMBIO MODALITÀ	✓	
INDIRIZZO DMX	✓	

*RESET: dopo il reset il dimmer torna nella modalità DMX-4CV / DMX-4CV-DIN; è quindi necessario riprogrammare anche la modalità di funzionamento desiderata

per il cambio dei parametri fare riferimento alle tabelle in appendice

Trasformazione della modalità di funzionamento di default in:
Ingresso SLAVE DMX-512/RDM monocanale con possibilità di settaggio parametri

CAMBIO MODALITÀ TRAMITE SETUPPER														
CONFIGURAZIONI	A	B	C	D	1	2	3	4	5	6	7	8	9	10
Ingresso Slave DMX-512/RDM monocanale con possibilità di settaggio parametri	OFF	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	ON

In questa modalità il dispositivo può essere controllato mediante un bus DMX-512/RDM con funzionalità monocanale.

Il dispositivo occupa 1 canale DMX-512/RDM e in questa modalità è in grado di gestire fino a 32A complessivi.
L'indirizzo DMX di base (DEFAULT 1) può essere impostato mediante protocollo RDM oppure mediante il programmatore SETUPPER (opzionale) (fare riferimento al manuale del programmatore per le modalità). In questa modalità è inoltre possibile selezionare la curva di risposta del dispositivo (LOG o LIN) ed abilitare o disabilitare il FADE HW.




ATTENZIONE: per il corretto funzionamento del BUS DMX è necessario collegare tra loro i poli GND dei dispositivi connessi al BUS.
Utilizzare il morsetto VSS come in **figura**.

nb: in questa modalità il controllo BLE (Bluetooth) è inibito

PARAMETRI CONFIGURABILI	SI	NO
RESET*	✓	
CURVA DI DIMMING		✓
FADE		✓
CAMBIO MODALITÀ	✓	
INDIRIZZO DMX	✓	

***RESET:** dopo il reset il dimmer torna nella modalità DMX-4CV / DMX-4CV-DIN; è quindi necessario riprogrammare anche la modalità di funzionamento desiderata

per il cambio dei parametri fare riferimento alle tabelle in appendice

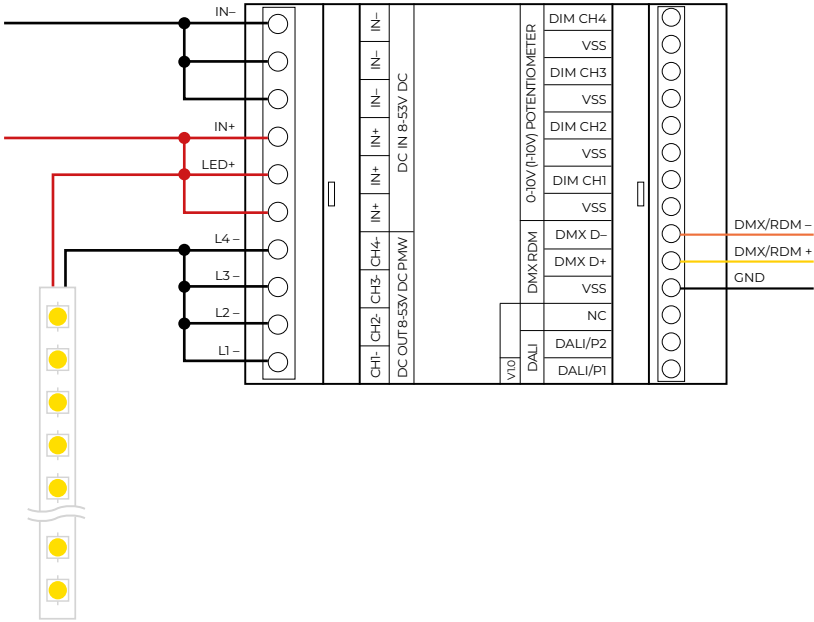

Trasformazione della modalità di funzionamento di default in: Ingresso DALI 4 canali (cod. DALI-4CV / DALI-4CV-DIN)

CAMBIO MODALITÀ TRAMITE SETUPPER														
CONFIGURAZIONI	A	B	C	D	1	2	3	4	5	6	7	8	9	10
Ingresso DALI 4 canali	OFF	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF
In alternativa acquistare il codice DALI-4CV / DALI-4CV-DIN già preconfigurato in questa modalità di funzionamento.														

In questa modalità i dispositivi agiscono come dimmer DALI 4 canali e vengono riconosciuti durante l'indirizzamento come 4 dispositivi DALI completamente indipendenti.
La corrente max assorbita dal bus DALI è di circa 2mA.

In questa modalità i parametri ricevuti dal bus DALI vengono inviati anche sul bus DMX512/RDM sui canali fissi 1-2-3-4:
Primo device DALI → DMX512 ADDRESS 1
Secondo device DALI → DMX512 ADDRESS 2
Terzo device DALI → DMX512 ADDRESS 3
Quarto device DALI → DMX512 ADDRESS 4


nb: in questa modalità il controllo BLE (Bluetooth) è inibito

PARAMETRI CONFIGURABILI	SI	NO
RESET*	✓	
CURVA DI DIMMING		✓
FADE		✓
CAMBIO MODALITÀ	✓	
INDIRIZZO DMX		✓

*RESET: dopo il reset il dimmer torna nella modalità DMX-4CV / DMX-4CV-DIN; è quindi necessario riprogrammare anche la modalità di funzionamento desiderata

per il cambio dei parametri fare riferimento alle tabelle in appendice

 Prodotto certificato presso DIIA (DALI alliance):
<https://www.dali-alliance.org/products/2784/l406ma00t4a01>

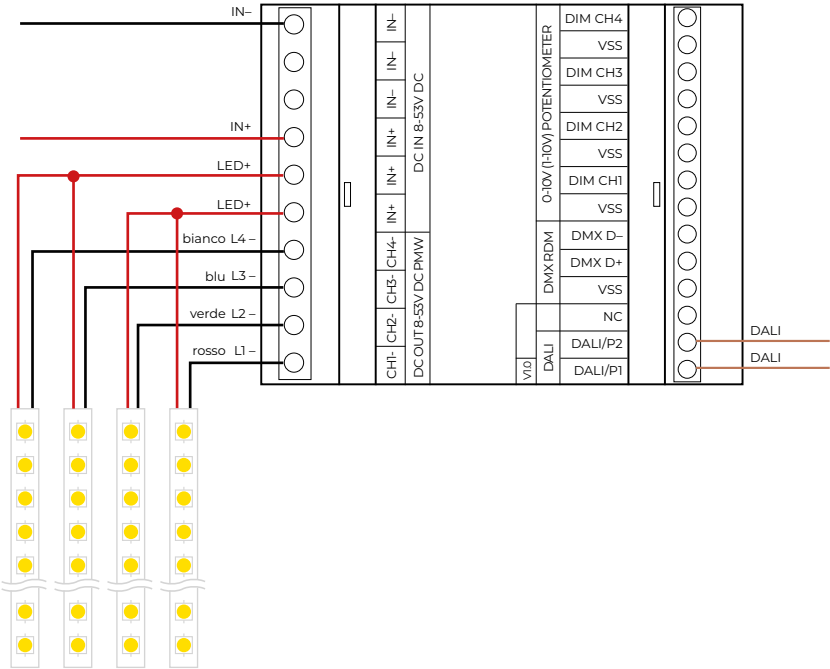

Comandi standard implementati

DIRECT ARC POWER	STORE ACTUAL LEVEL IN THE DTR	QUERY STATUS	QUERY ACTUAL LEVEL
OFF	STORE THE DTR AS MAX LEVEL	QUERY BALLAST	QUERY MAX LEVEL
UP	STORE THE DTR AS MIN LEVEL	QUERY LAMP POWER ON	QUERY MIN LEVEL
DOWN	STORE THE DTR AS SYSTEM FAILURE LEVEL	QUERY LIMIT ERROR	QUERY POWER ON LEVEL
STEP UP	STORE THE DTR AS POWER ON LEVEL	QUERY RESET STATE	QUERY SYSTEM FAILURE LEVEL
STEP DOWN	STORE THE DTR AS FADE TIME	QUERY MISSING SHORT ADDRESS	QUERY FADE TIME/FADE RATE
RECALL MAX LEVEL	STORE THE DTR AS FADE RATE	QUERY VERSION NUMBER	QUERY SCENE LEVEL (0-15)
RECALL MIN LEVEL	STORE THE DTR AS SCENE (0-15)	QUERY DEVICE TYPE	QUERY GROUPS (0-7)
STEP DOWN AND OFF	REMOVE FROM SCENE (0-15)	QUERY PHISICAL MINIMUM LEVEL	QUERY GROUPS (8-15)
ON AND STEP UP	ADD TO GROUP (0-15)	QUERY POWER FAILURE	QUERY RANDOM ADDRESS H
GO TO SCENE (0-15)	REMOVE FROM GROUP (0-15)	QUERY CONTENT DTR1	QUERY RANDOM ADDRESS M
RESET	STORE DTR AS SHORT ADDRESS	QUERY CONTENT DTR2	QUERY RANDOM ADDRESS L

Trasformazione della modalità di funzionamento di default in: ingresso DALI monocanale (cod. DALI-CV-HP / DALI-CV-HP-DIN)

CAMBIO MODALITÀ TRAMITE SETUPPER														
CONFIGURAZIONI	A	B	C	D	1	2	3	4	5	6	7	8	9	10
Ingresso DALI 4 monocanale	OFF	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF	ON
In alternativa acquistare il codice DALI-CV-HP / DALI-CV-HP-DIN già preconfigurato in questa modalità di funzionamento.														

In questa modalità i dispositivi agiscono come dimmer DALI monocanale.
La corrente max assorbita dal bus DALI è di circa 2mA.

In questa modalità i parametri ricevuti dal bus DALI vengono inviati anche sul bus DMX512/RDM sui canali fissi 1-2-3-4:
Primo device DALI → DMX512 ADDRESS 1
Secondo device DALI → DMX512 ADDRESS 2
Terzo device DALI → DMX512 ADDRESS 3
Quarto device DALI → DMX512 ADDRESS 4


nb: in questa modalità il controllo BLE (Bluetooth) è inibito

PARAMETRI CONFIGURABILI	SI	NO
RESET*	✓	
CURVA DI DIMMING		✓
FADE		✓
CAMBIO MODALITÀ	✓	
INDIRIZZO DMX		✓

***RESET:** dopo il reset il dimmer torna nella modalità DMX-4CV / DMX-4CV-DIN; è quindi necessario riprogrammare anche la modalità di funzionamento desiderata

per il cambio dei parametri fare riferimento alle tabelle in appendice

 Prodotto certificato presso DIIA (DALI alliance): <https://www.dali-alliance.org/products/2784/l406ma00t4a01>

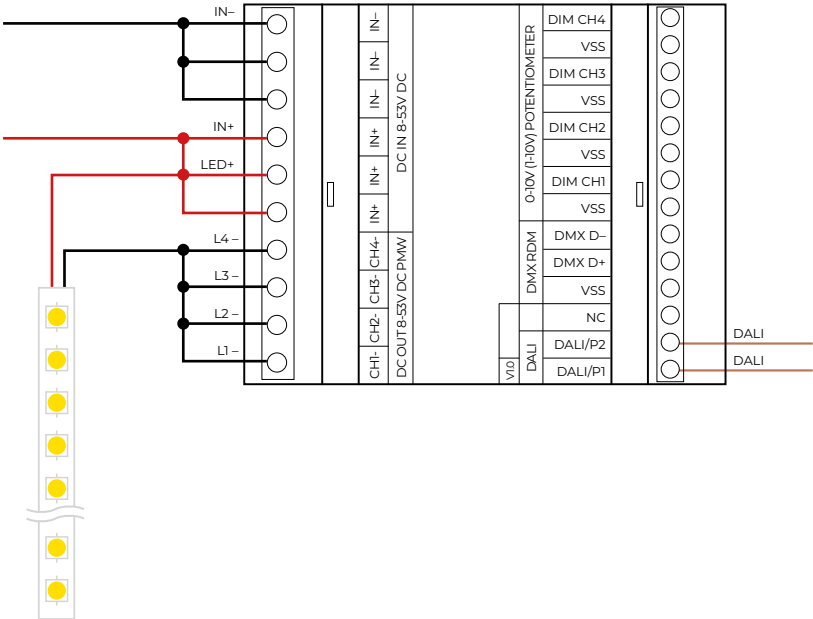

Comandi standard implementati	DALI				DMX512/RDM			
	1	2	3	4	1	2	3	4
DIRECT ARC POWER	OFF	UP	DOWN	STEP UP	STORE ACTUAL LEVEL IN THE DTR	STORE THE DTR AS MAX LEVEL	STORE THE DTR AS MIN LEVEL	STORE THE DTR AS SYSTEM FAILURE LEVEL
RECALL MAX LEVEL	RECALL MIN LEVEL	STEP DOWN AND OFF	ON AND STEP UP	GO TO SCENE (0-15)	STORE THE DTR AS POWER ON LEVEL	STORE THE DTR AS FADE TIME	STORE THE DTR AS FADE RATE	REMOVE FROM SCENE (0-15)
RESET					STORE THE DTR AS SCENE (0-15)	REMOVE FROM SCENE (0-15)	ADD TO GROUP (0-15)	REMOVE FROM GROUP (0-15)
					STORE DTR AS SHORT ADDRESS			
					QUERY STATUS	QUERY BALLAST	QUERY LAMP POWER ON	QUERY LIMIT ERROR
					QUERY RESET STATE	QUERY MISSING SHORT ADDRESS	QUERY VERSION NUMBER	QUERY DEVICE TYPE
					QUERY PHYSICAL MINIMUM LEVEL	QUERY POWER FAILURE	QUERY CONTENT DTR1	QUERY CONTENT DTR2
					QUERY ACTUAL LEVEL	QUERY MAX LEVEL	QUERY MIN LEVEL	QUERY POWER ON LEVEL
					QUERY SYSTEM FAILURE LEVEL	QUERY FADE TIME/FADE RATE	QUERY SCENE LEVEL (0-15)	QUERY GROUPS (0-7)
					QUERY GROUPS (8-15)	QUERY RANDOM ADDRESS H	QUERY RANDOM ADDRESS M	QUERY RANDOM ADDRESS L

Trasformazione della modalità di funzionamento di default in: Ingresso PUSH (non isolato) 4 canali indipendenti + Bluetooth (cod. PUSH-4CV / PUSH-4CV-DIN)

CAMBIO MODALITÀ TRAMITE SETUPPER														
CONFIGURAZIONI	A	B	C	D	1	2	3	4	5	6	7	8	9	10
Ingresso PUSH (non isolato) 4 canali indipendenti+Bluetooth	OFF	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	ON	OFF

In alternativa acquistare il codice PUSH-4CV / PUSH-4CV-DIN già preconfigurato in questa modalità di funzionamento.

In questa modalità è possibile controllare i 4 canali di uscita mediante la pressione di 4 tasti NO connessi come in **figura**.

Funzionamento interfaccia PUSH (P1, P2, P3, P4)

Singolo Click (pressione rapida <1sec)


- Accende o spegne l'output (ON/OFF)

Doppio Click (pressione rapida <1sec)

- Imposta massima luminosità (output= 100%)

Long Press (pressione prolungata >1sec)

- Se il dimmer è in stato di OFF, imposta l'output al valore di minimo (default= 1%)
- Se il dimmer è in stato di ON, la pressione prolungata permette il dimming dell'output (salita/discesa)

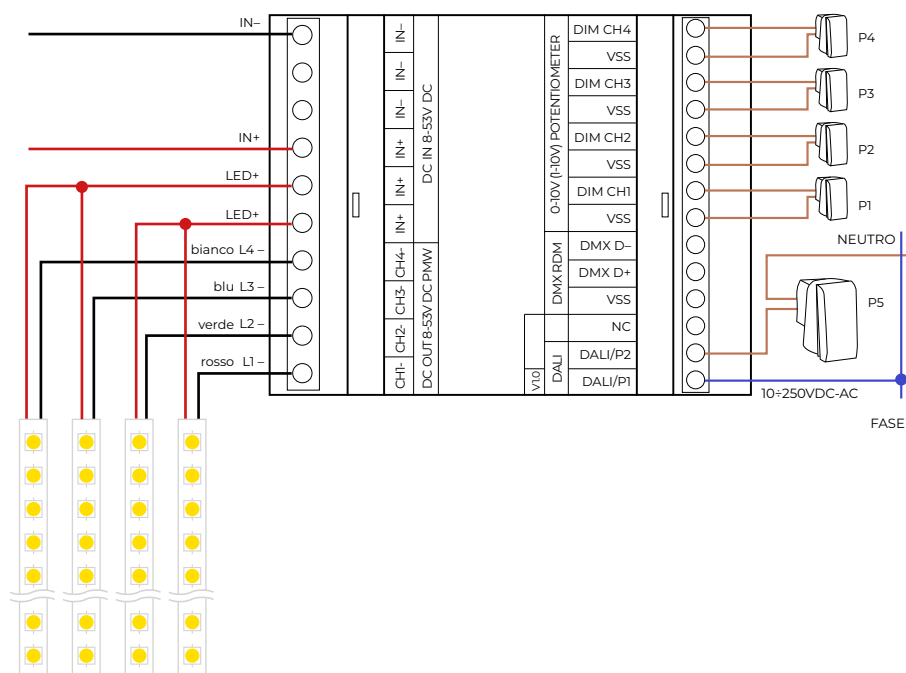

Il pulsante P5 (da collegare opzionalmente) connesso ai poli DALI/P1 e DALI/P2 può essere collegato ad una tensione da 10VDC a 250VAC, la pressione rapida di tale pulsante comporta lo spegnimento e l'accensione di tutti i canali contemporaneamente. Tale utilizzo è utile quando il dimmer non viene controllato dai pulsanti fisici P1, P2, P3 e P4 ma solo tramite bluetooth e con il pulsante P5 isolato collegato a DALI/P1 e DALI/P2 viene solo fatta l'accensione e lo spegnimento dello stesso.

In questa modalità lo stato del canale di uscita viene inviato anche sul bus DMX512/ RDM sui canali fissi 1-2-3-4:
Primo device DALI → DMX512 ADDRESS 1
Secondo device DALI → DMX512 ADDRESS 2
Terzo device DALI → DMX512 ADDRESS 3
Quarto device DALI → DMX512 ADDRESS 4

In questa modalità è anche possibile, controllare il dispositivo mediante smartphone attraverso l'APP Newlab Go. Riferirsi alla pagina seguente per dettagli sull'installazione ed uso dell'app.

PARAMETRI CONFIGURABILI	Sì	NO
RESET*	✓	
CURVA DI DIMMING	✓	
FADE	✓	
CAMBIO MODALITÀ	✓	
INDIRIZZO DMX		✓

*RESET: dopo il reset il dimmer torna nella modalità DMX-4CV / DMX-4CV-DIN; è quindi necessario riprogrammare anche la modalità di funzionamento desiderata

per il cambio dei parametri fare riferimento alle tabelle in appendice

Modalità di funzionamento App Newlab GO



Newlab GO è un'APP per dispositivi mobile Android e iOS per il controllo dei dimmer Newlab Bluetooth.
L'APP Newlab Go è compatibile con tutti i dimmer a catalogo della famiglia **Newlab GO / Bluetooth**.

I prodotti Newlab con controllo BLE garantiscono la possibilità di gestire l'illuminazione da smartphone dei punti luce in maniera semplice ed economica. L'accoppiamento del dimmer allo smartphone non necessita di associazione Bluetooth, ma avviene in maniera automatica.

Le funzionalità implementate per il controllo del dimmer sono:

- Accensione, spegnimento e controllo del livello di luminosità di ogni singolo punto luce.
- Possibilità di raggruppare e controllare insieme più punti luce con un semplice comando.
- Creazione e richiamo di scenari luce preferiti.
- Gestione dell'impianto da una unica interfaccia utente semplificata.

Funzionalità app Newlab Go

- Gestione di dimmer a 1 o 4 canali con diverse modalità di funzionamento:
 - Mono canale
 - 4 canali sincronizzati
 - RGB (3 Canali o 3 zone)
 - RGB + White (4 Canali o 4 zone)
 - Bianco Dinamico

Il **salvataggio** del livello di dimming avviene alla chiusura dell'APP o alla disconnessione dei dispositivi bluetooth dallo smartphone.
Per effettuare il **reset** della password relativa all'APP Newlab Go tenere premuto il pulsante di controllo del dimmer per 30 secondi.

La password di default è **1234**.

nb: a seconda del device potranno essere disponibili solo alcune funzioni.

L'app è disponibile inquadrando i QR Code



oppure cliccando uno dei seguenti link per

ANDROID

/

IOS

È inoltre disponibile una videoguia al link

VIDEOGUIDA


Trasformazione della modalità di funzionamento di default in:
Ingresso PUSH (isolato) monocanale + Bluetooth (cod. PUSH-CV-HP / PUSH-CV-HP-DIN)

CAMBIO MODALITÀ TRAMITE SETUPPER														
CONFIGURAZIONI	A	B	C	D	1	2	3	4	5	6	7	8	9	10
Ingresso PUSH (isolato) monocanale+Bluetooth	OFF	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	ON	ON
In alternativa acquistare il codice PUSH-CV-HP / PUSH-CV-HP-DIN già preconfigurato in questa modalità di funzionamento.														

In questa modalità è possibile controllare i 4 canali di uscita sincronicamente mediante la pressione di 1 tasto NO connesso come in **figura**.
Il dispositivo in questa modalità è in grado di gestire fino a 32A complessivi.

In questa modalità è anche possibile, controllare il dispositivo mediante smartphone attraverso l'**APP Newlab Go**.
Riferirsi alla pagina seguente per dettagli sull'installazione ed uso dell'app.

In questa modalità i parametri ricevuti dal bus DALI vengono inviati anche sul bus DMX512/RDM sui canali fissi 1-2-3-4:
Primo device DALI → DMX512 ADDRESS 1
Secondo device DALI → DMX512 ADDRESS 2
Terzo device DALI → DMX512 ADDRESS 3
Quarto device DALI → DMX512 ADDRESS 4

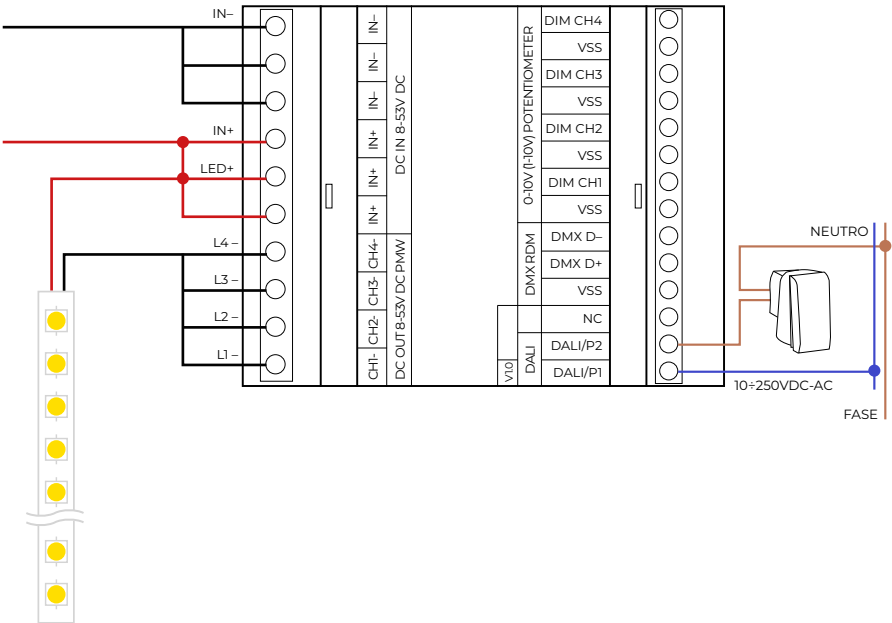

Funzionamento interfaccia PUSH

Singolo Click (pressione rapida <1sec)
- Accende o spegne l'output (ON/OFF)

Doppio Click (pressione rapida <1sec)
- Imposta massima luminosità (output= 100%)

Long Press (pressione prolungata >1sec)
- Se il dimmer è in stato di OFF, imposta l'output al valore di minimo (default= 1%)
- Se il dimmer è in stato di ON, la pressione prolungata permette il dimming dell'output (salita/discesa)

PARAMETRI CONFIGURABILI	Sì	NO
RESET*	✓	
CURVA DI DIMMING	✓	
FADE	✓	
CAMBIO MODALITÀ	✓	
INDIRIZZO DMX		✓

*RESET: dopo il reset il dimmer torna nella modalità DMX-4CV / DMX-4CV-DIN; è quindi necessario riprogrammare anche la modalità di funzionamento desiderata
per il cambio dei parametri fare riferimento alle tabelle in appendice

Modalità di funzionamento App Newlab GO



Newlab GO è un'APP per dispositivi mobile Android e iOS per il controllo dei dimmer Newlab Bluetooth.
L'APP Newlab Go è compatibile con tutti i dimmer a catalogo della famiglia **Newlab GO / Bluetooth**.

I prodotti Newlab con controllo BLE garantiscono la possibilità di gestire l'illuminazione da smartphone dei punti luce in maniera semplice ed economica. L'accoppiamento del dimmer allo smartphone non necessita di associazione Bluetooth, ma avviene in maniera automatica.

Le funzionalità implementate per il controllo del dimmer sono:

- Accensione, spegnimento e controllo del livello di luminosità di ogni singolo punto luce.
- Possibilità di raggruppare e controllare insieme più punti luce con un semplice comando.
- Creazione e richiamo di scenari luce preferiti.
- Gestione dell'impianto da una unica interfaccia utente semplificata.

Funzionalità app Newlab Go

- Gestione di dimmer a 1 o 4 canali con diverse modalità di funzionamento:
 - Mono canale
 - 4 canali sincronizzati
 - RGB (3 Canali o 3 zone)
 - RGB + White (4 Canali o 4 zone)
 - Bianco Dinamico

Il **salvataggio** del livello di dimming avviene alla chiusura dell'APP o alla disconnessione dei dispositivi bluetooth dallo smartphone. Per effettuare il **reset** della password relativa all'APP Newlab Go tenere premuto il pulsante di controllo del dimmer per 30 secondi.

La password di default è **1234**.

nb: a seconda del device potranno essere disponibili solo alcune funzioni.

L'app è disponibile inquadrando i QR Code



oppure cliccando uno dei seguenti link per

ANDROID

/

IOS

È inoltre disponibile una videoguia al link

VIDEOGUIDA

Trasformazione della modalità di funzionamento di default in:
Ingresso POTENZIOMETRO LINEARE (100Kohm), 0-10V/1-10V (non isolato) 4 canali
(cod. POT-4CV / POT-4CV-DIN)


CAMBIO MODALITÀ TRAMITE SETUPPER														
CONFIGURAZIONI	A	B	C	D	1	2	3	4	5	6	7	8	9	10
Ingresso potenziometro lineare (100KOhm), 0-10V, 1-10V 4 canali indipendenti	OFF	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF	OFF
In alternativa acquistare il codice POT-4CV / POT-4CV-DIN già preconfigurato in questa modalità di funzionamento.														

Questa modalità consente il controllo del dimmer con segnali analogici.

In base al cablaggio effettuato come indicato nelle figure precedenti è possibile utilizzare un segnale **0-10V (1-10V)** o in alternativa un **potenziometro** lineare con valore 100Kohm. Ogni canale analogico controlla la luminosità del canale di uscita corrispondente.

La corrente max assorbita dal dimmer dall'interfaccia 0-10V/1-10V è di 0,1mA. Di default la curva di dimming segue un andamento logaritmico (impostabile tramite SETUPPER, acquistabile separatamente) proporzionale alla tensione di controllo.


Un valore di tensione inferiore ad 1V viene interpretato come carico spento.

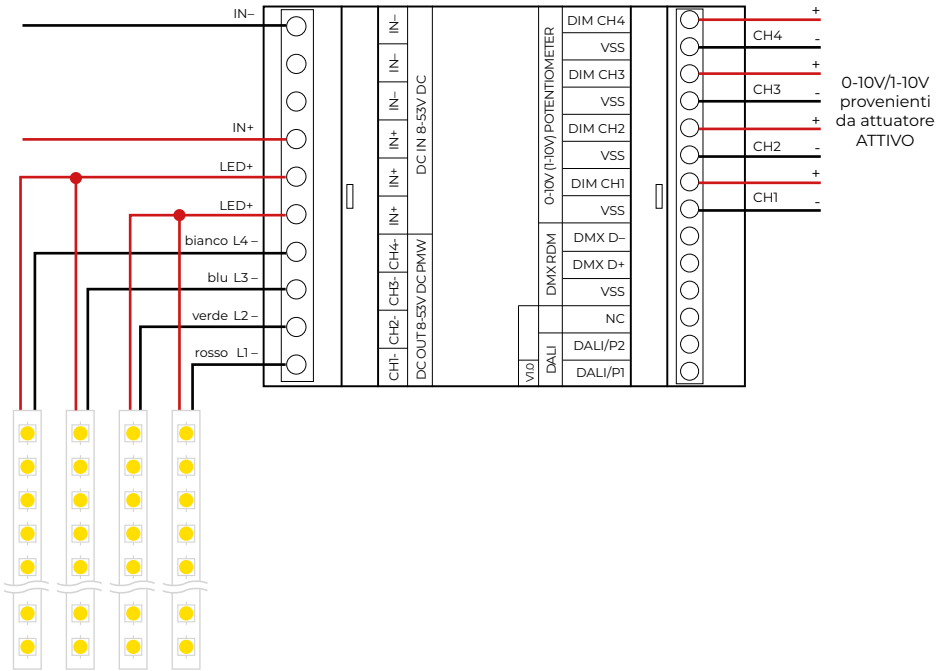

PARAMETRI CONFIGURABILI	SI	NO
RESET*	✓	
CURVA DI DIMMING	✓	
FADE		✓
CAMBIO MODALITÀ	✓	
INDIRIZZO DMX		✓

*RESET: dopo il reset il dimmer torna nella modalità DMX-4CV / DMX-4CV-DIN; è quindi necessario riprogrammare anche la modalità di funzionamento desiderata


per il cambio dei parametri fare riferimento alle tabelle in appendice

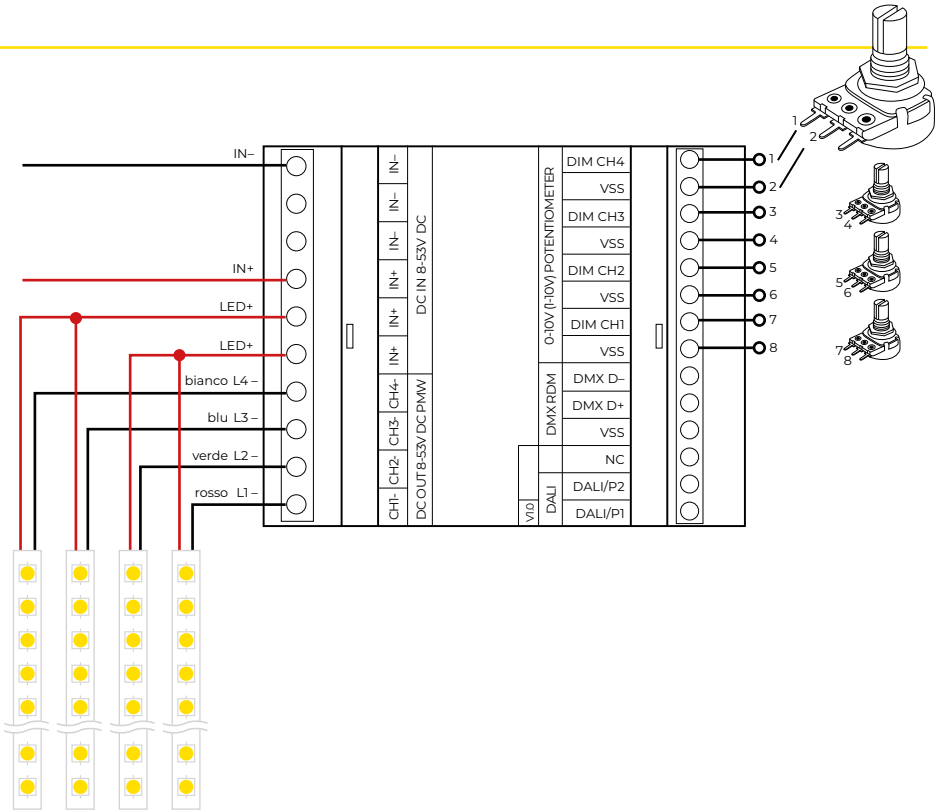

Questa modalità consente il controllo del dimmer con segnali analogici ed uscite sincrone monocanale.

In base al cablaggio effettuato come indicato nelle figure precedenti è possibile utilizzare un segnale **0-10V (1-10V)**. Tutti i canali di uscita verranno gestiti in maniera sincrona e proporzionale al segnale di ingresso.


La corrente max assorbita dal dimmer dall'interfaccia 0-10V/1-10V in modalità monocanale è di 0,4mA per interfaccia (1,6 mA per i 4 ingressi parallelizzati). Di default la curva di dimming segue un andamento logaritmico (impostabile tramite SETUPPER, acquistabile separatamente) proporzionale alla tensione di controllo. Un valore di tensione inferiore ad 1V viene interpretato come carico spento.

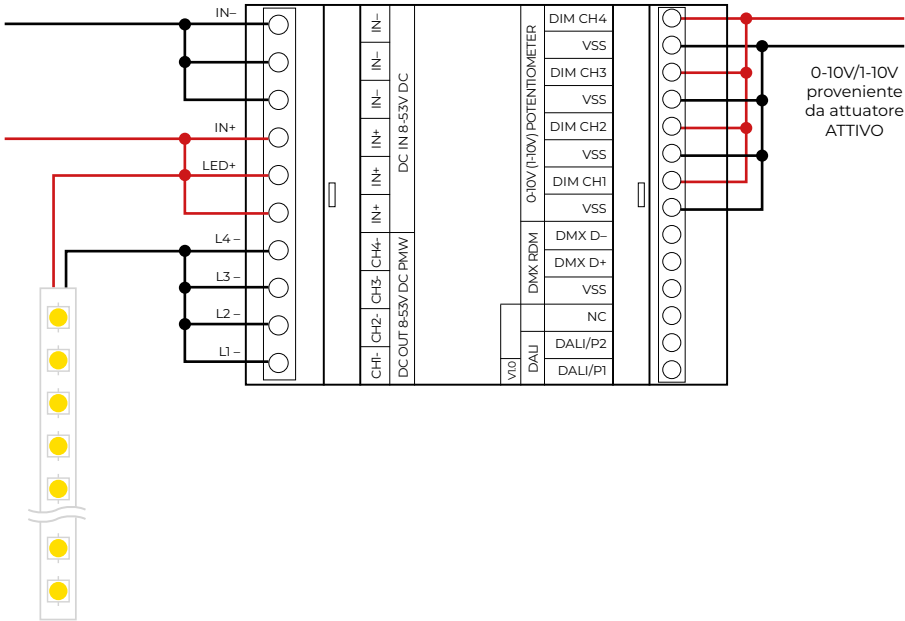

PARAMETRI CONFIGURABILI	SI	NO
RESET*	✓	
CURVA DI DIMMING	✓	
FADE		✓
CAMBIO MODALITÀ	✓	
INDIRIZZO DMX		✓

***RESET:** dopo il reset il dimmer torna nella modalità DMX-4CV / DMX-4CV-DIN; è quindi necessario riprogrammare anche la modalità di funzionamento desiderata


per il cambio dei parametri fare riferimento alle tabelle in appendice

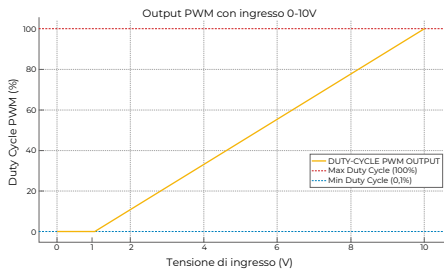

Trasformazione della modalità di funzionamento di default in:
generatore SHOW STANDALONE con controllo trasmissione su BUS DMX-512
(cod. PUSH-4CV-SHOW-DIN oppure cod. PUSH-SHOW-DMX / PUSH-SHOW-DMX-DIN)

CAMBIO MODALITÀ TRAMITE SETUPPER														
CONFIGURAZIONI	A	B	C	D	1	2	3	4	5	6	7	8	9	10
Generatore Show Standalone con controllo trasmissione su BUS DMX-512	OFF	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF	ON
In alternativa acquistare il codice PUSH-4CV-SHOW-DIN / PUSH-SHOW-DMX-DIN già preconfigurato in questa modalità di funzionamento.														

In questa modalità i dimmer agiscono come generatore di show pre-programmati DMX, con input su 4 tasti N/O connessi come in **figura**. In questa modalità è anche possibile, controllare il dispositivo mediante smartphone attraverso l'**APP Newlab Go**. Riferirsi alla pagina seguente per dettagli sull'installazione ed uso dell'app. Il pulsante N/O (opzionale) connesso ai poli DALI/P1 e DALI/P2 può essere collegato ad una tensione da 10VDC a 250VAC; la sua pressione rapida comporta lo spegnimento e l'accensione di tutti i canali contemporaneamente. Tale utilizzo è utile quando il dimmer non viene controllato dai pulsanti fisici P1, P2, P3 e P4 ma solo tramite Bluetooth e con il pulsante isolato collegato al Pulsante 5 viene solo fatta l'accensione e lo spegnimento dello stesso. Ad ogni pressione del tasto corrisponde una variazione nel programma in esecuzione come da tabella seguente.

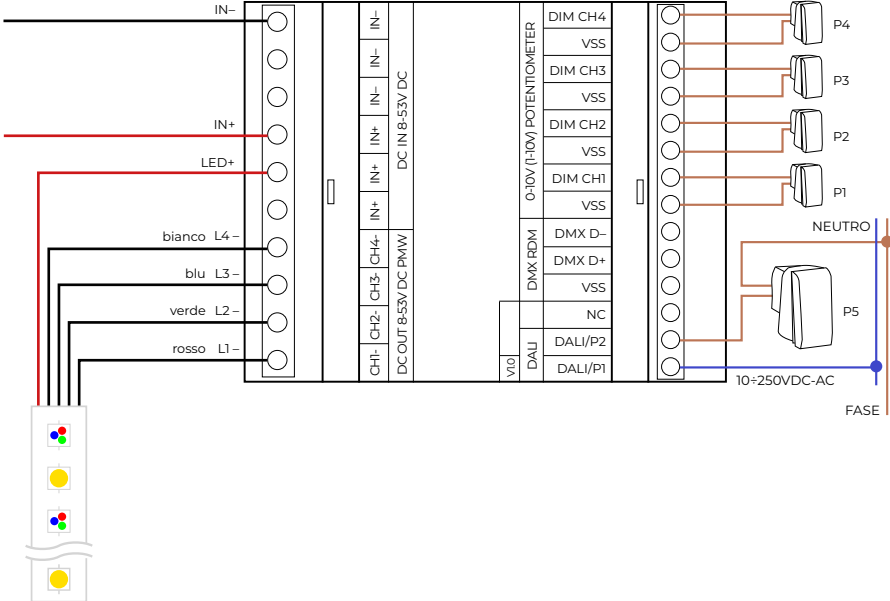

P1	P2	P3	P4
SHOW E DISSOLVENZE	COLORI FISSI (% CANALI R-G-B)	SPEGNIMENTO E ACCENSIONE (CH4 bianco)	SPEGNIMENTO E ACCENSIONE
1 arcobaleno lento	1 blocco show e memorizzazione colore	1. pressione rapida: spegnimento	1. pressione rapida: spegnimento
2 arcobaleno medio	1 bianco (66% - 100% - 78%)		
3 arcobaleno veloce	2 bianco caldo (100% - 83% - 5%)	2. pressione rapida: accensione	2. pressione rapida: accensione con memoria dell'ultimo spegnimento
4 dissolvenza lenta	3 bianco freddo (54% - 100% - 100%)		
5 dissolvenza media	4 rosso (100% - 00% - 00%)	3. pressione lenta: variazione intensità luminosa (2% - 100%)	3. pressione lenta: variazione intensità luminosa (2% - 100%)
6 dissolvenza veloce	5 arancio (100% - 15% - 00%)		
7 dissolvenza fredda lenta	6 mandarino (100% - 15% - 00%)		
	7 melone (100% - 47% - 00%)		
8 dissolvenza fredda media	8 limone (100% - 100% - 00%)		
	9 lime (70% - 100% - 00%)		
9 dissolvenza fredda veloce	10 verde acido (47% - 100% - 00%)		
	11 mela verde (29% - 100% - 00%)		
10 dissolvenza calda lenta	12 verde fluo (11% - 100% - 00%)		
	13 verde (00% - 100% - 00%)		
11 dissolvenza calda media	14 verde acqua (00% - 100% - 10%)		
	15 caraibi (00% - 100% - 20%)		
12 dissolvenza calda veloce	16 cielo terso (00% - 100% - 45%)		
	17 azzurro (00% - 100% - 100%)		
13 dissolvenza rossa lenta	18 blu manganese (00% - 43% - 100%)		
	19 blu (00% - 00% - 100%)		
14 dissolvenza rossa media	20 iris (10% - 00% - 100%)		
	21 lavanda (17% - 00% - 100%)		
15 dissolvenza rossa veloce	22 violetto (37% - 00% - 100%)		
	23 rosa fluo (65% - 00% - 100%)		
	24 rosa tenue (100% - 47% - 16%)		
	25 rosa (100% - 00% - 100%)		
	26 rosa shocking (100% - 00% - 75%)		
	27 rosa acceso (100% - 00% - 47%)		
	28 viola (100% - 00% - 100%)		
	29 porpora (100% - 00% - 4%)		

PARAMETRI CONFIGURABILI	SÌ	NO
RESET*	✓	
CURVA DI DIMMING		✓
FADE		✓
CAMBIO MODALITÀ	✓	
INDIRIZZO DMX		✓

*RESET: dopo il reset il dimmer torna nella modalità DMX-4CV / DMX-4CV-DIN; è quindi necessario riprogrammare anche la modalità di funzionamento desiderata

per il cambio dei parametri fare riferimento alle tabelle in appendice

Modalità di funzionamento App Newlab GO



Newlab GO è un'APP per dispositivi mobile Android e iOS per il controllo dei dimmer Newlab Bluetooth.
L'APP Newlab Go è compatibile con tutti i dimmer a catalogo della famiglia **Newlab GO / Bluetooth**.

I prodotti Newlab con controllo BLE garantiscono la possibilità di gestire l'illuminazione da smartphone dei punti luce in maniera semplice ed economica. L'accoppiamento del dimmer allo smartphone non necessita di associazione Bluetooth, ma avviene in maniera automatica.

Le funzionalità implementate per il controllo del dimmer sono:

- Accensione, spegnimento e controllo del livello di luminosità di ogni singolo punto luce.
- Possibilità di raggruppare e controllare insieme più punti luce con un semplice comando.
- Creazione e richiamo di scenari luce preferiti.
- Gestione dell'impianto da una unica interfaccia utente semplificata.

Funzionalità app Newlab Go

- Gestione di dimmer a 1 o 4 canali con diverse modalità di funzionamento:
 - Mono canale
 - 4 canali sincronizzati
 - RGB (3 Canali o 3 zone)
 - RGB + White (4 Canali o 4 zone)
 - Bianco Dinamico

Il **salvataggio** del livello di dimming avviene alla chiusura dell'APP o alla disconnessione dei dispositivi bluetooth dallo smartphone.
Per effettuare il **reset** della password relativa all'APP Newlab Go tenere premuto il pulsante di controllo del dimmer per 30 secondi.

La password di default è **1234**.

nb: a seconda del device potranno essere disponibili solo alcune funzioni.

L'app è disponibile inquadrando i QR Code



oppure cliccando uno dei seguenti link per

ANDROID

/

IOS


È inoltre disponibile una videoguia al link

VIDEOGUIDA

TEMPORARY ACTIVATION MODE 4 canali indipendenti (solo per versione fw > 4.5)

In questa modalità lo stato dei canali di uscita viene trasmesso sul bus DMX512/RDM sui canali fissi 1-2-3-4:

- Primo CANALE → DMX512 ADDRESS 1
- Secondo CANALE → DMX512 ADDRESS 2
- Terzo CANALE → DMX512 ADDRESS 3
- Quarto CANALE → DMX512 ADDRESS 4

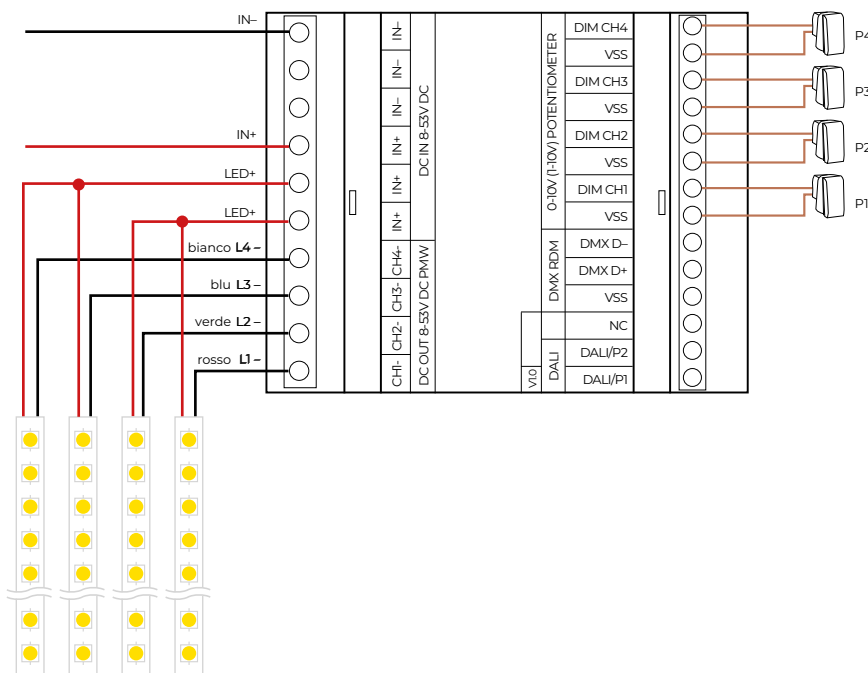

PARAMETRI CONFIGURABILI	SI	NO
RESET*	✓	
CURVA DI DIMMING		✓
FADE		✓
CAMBIO MODALITÀ	✓	
INDIRIZZO DMX		✓

per il cambio dei parametri fare riferimento
alle tabelle in appendice

Configurazione parametri

Clicca sulla configurazione desiderata per visualizzare l'immagine del programmatore

RESET														
CONFIGURAZIONI	A	B	C	D	1	2	3	4	5	6	7	8	9	10
RESET*	ON	ON	ON	ON	ON	ON	ON	ON	ON	ON	ON	ON	ON	ON

*RESET: necessario riprogrammare anche la modalità di funzionamento desiderata

CURVA DIMMING														
CONFIGURAZIONI	A	B	C	D	1	2	3	4	5	6	7	8	9	10
LOGARITMICA	OFF	OFF	OFF	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
LINEARE	OFF	OFF	OFF	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON

FADE														
CONFIGURAZIONI	A	B	C	D	1	2	3	4	5	6	7	8	9	10
FADE OFF	OFF	OFF	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
FADE ON	OFF	OFF	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON

CAMBIO MODALITÀ														
CONFIGURAZIONI	A	B	C	D	1	2	3	4	5	6	7	8	9	10
DMX-4CV / DMX-4CV-DIN Ingresso Slave DMX-512/RDM 4 Canali	OFF	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
Ingresso Slave DMX-512/RDM 4 canali con possibilità di settaggio parametri	OFF	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON
DMX-CV-HP / DMX-CV-HP-DIN Ingresso Slave DMX-512/RDM monocanale	OFF	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF
Ingresso Slave DMX-512/RDM monocanale con possibilità di settaggio parametri	OFF	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	ON
DALI-4CV / DALI-4CV-DIN Ingresso DALI 4 canali	OFF	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF
DALI-CV-HP / DALI-CV-HP-DIN Ingresso DALI 4 monocanale	OFF	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF	ON
PUSH-4CV / PUSH-4CV-DIN Ingresso PUSH (non isolato) 4 canali indipendenti+Bluetooth	OFF	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	ON	OFF
PUSH-CV-HP Ingresso PUSH (isolato) monocanale+Bluetooth	OFF	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	ON	ON
POT-4CV / POT-4CV-DIN Ingresso potenziometro lineare (100KOhm), 0-10V, 1-10V 4 canali indipendenti	OFF	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF	OFF
PUSH4CV-SHOW-DIN PUSH-SHOW-DMX PUSH-SHOW-DMX-DIN Generatore Show Standalone con controllo trasmissione su BUS DMX-512	OFF	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF	ON
Temporary Activation Mode (solo per versione fw > 4.5)	OFF	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF	ON	OFF

INDIRIZZO DMX														
CONFIGURAZIONI	A	B	C	D	1	2	3	4	5	6	7	8	9	10
indirizzo 1	OFF	ON	OFF	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
indirizzo 2	OFF	ON	OFF	ON	OFF	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
indirizzo 3	OFF	ON	OFF	ON	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
indirizzo 4	OFF	ON	OFF	ON	OFF	OFF	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF
indirizzo 5	OFF	ON	OFF	ON	ON	OFF	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF
indirizzo 6	OFF	ON	OFF	ON	OFF	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF
indirizzo 7	OFF	ON	OFF	ON	ON	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF
indirizzo 8	OFF	ON	OFF	ON	OFF	OFF	OFF	ON	OFF	OFF	OFF	OFF	OFF	OFF
indirizzo 9	OFF	ON	OFF	ON	ON	OFF	OFF	ON	OFF	OFF	OFF	OFF	OFF	OFF
indirizzo 10	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	OFF	OFF	OFF	OFF	OFF
indirizzo 11	OFF	ON	OFF	ON	ON	ON	OFF	ON	OFF	OFF	OFF	OFF	OFF	OFF
indirizzo 12	OFF	ON	OFF	ON	OFF	OFF	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF
indirizzo 13	OFF	ON	OFF	ON	ON	OFF	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF
indirizzo 14	OFF	ON	OFF	ON	OFF	ON	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF
indirizzo 15	OFF	ON	OFF	ON	ON	ON	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF
indirizzo 16	OFF	ON	OFF	ON	OFF	OFF	OFF	OFF	ON	OFF	OFF	OFF	OFF	OFF
indirizzo 17	OFF	ON	OFF	ON	ON	OFF	OFF	OFF	ON	OFF	OFF	OFF	OFF	OFF
indirizzo 18	OFF	ON	OFF	ON	OFF	ON	OFF	OFF	ON	OFF	OFF	OFF	OFF	OFF
indirizzo 19	OFF	ON	OFF	ON	ON	ON	OFF	OFF	ON	OFF	OFF	OFF	OFF	OFF
indirizzo 20	OFF	ON	OFF	ON	OFF	OFF	ON	OFF	ON	OFF	OFF	OFF	OFF	OFF
indirizzo 21	OFF	ON	OFF	ON	ON	OFF	ON	OFF	ON	OFF	OFF	OFF	OFF	OFF
indirizzo 22	OFF	ON	OFF	ON	OFF	ON	ON	OFF	ON	OFF	OFF	OFF	OFF	OFF
indirizzo 23	OFF	ON	OFF	ON	ON	ON	ON	OFF	ON	OFF	OFF	OFF	OFF	OFF
indirizzo 24	OFF	ON	OFF	ON	OFF	OFF	OFF	ON	ON	OFF	OFF	OFF	OFF	OFF
indirizzo 25	OFF	ON	OFF	ON	ON	OFF	OFF	ON	ON	OFF	OFF	OFF	OFF	OFF
indirizzo 26	OFF	ON	OFF	ON	OFF	ON	OFF	ON	ON	OFF	OFF	OFF	OFF	OFF
indirizzo 27	OFF	ON	OFF	ON	ON	ON	OFF	ON	ON	OFF	OFF	OFF	OFF	OFF
indirizzo 28	OFF	ON	OFF	ON	OFF	OFF	ON	ON	ON	OFF	OFF	OFF	OFF	OFF
indirizzo 29	OFF	ON	OFF	ON	ON	OFF	ON	ON	ON	OFF	OFF	OFF	OFF	OFF
indirizzo 30	OFF	ON	OFF	ON	OFF	ON	ON	ON	ON	OFF	OFF	OFF	OFF	OFF
indirizzo 31	OFF	ON	OFF	ON	ON	ON	ON	ON	ON	OFF	OFF	OFF	OFF	OFF
indirizzo 32	OFF	ON	OFF	ON	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF	OFF	OFF
indirizzo 33	OFF	ON	OFF	ON	ON	OFF	OFF	OFF	OFF	ON	OFF	OFF	OFF	OFF
indirizzo 34	OFF	ON	OFF	ON	OFF	ON	OFF	OFF	OFF	ON	OFF	OFF	OFF	OFF
indirizzo 35	OFF	ON	OFF	ON	ON	ON	OFF	OFF	OFF	ON	OFF	OFF	OFF	OFF
indirizzo 36	OFF	ON	OFF	ON	OFF	OFF	ON	OFF	OFF	ON	OFF	OFF	OFF	OFF
indirizzo 37	OFF	ON	OFF	ON	ON	OFF	ON	OFF	OFF	ON	OFF	OFF	OFF	OFF
indirizzo 38	OFF	ON	OFF	ON	OFF	ON	ON	OFF	OFF	ON	OFF	OFF	OFF	OFF
indirizzo 39	OFF	ON	OFF	ON	ON	ON	ON	OFF	OFF	ON	OFF	OFF	OFF	OFF
indirizzo 40	OFF	ON	OFF	ON	OFF	OFF	OFF	ON	OFF	ON	OFF	OFF	OFF	OFF
indirizzo 41	OFF	ON	OFF	ON	ON	OFF	OFF	ON	OFF	ON	OFF	OFF	OFF	OFF
indirizzo 42	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	OFF	OFF	OFF
indirizzo 43	OFF	ON	OFF	ON	ON	ON	OFF	ON	OFF	ON	OFF	OFF	OFF	OFF

INDIRIZZO DMX														
CONFIGURAZIONI	A	B	C	D	1	2	3	4	5	6	7	8	9	10
indirizzo 44	OFF	ON	OFF	ON	OFF	OFF	ON	ON	OFF	ON	OFF	OFF	OFF	OFF
indirizzo 45	OFF	ON	OFF	ON	ON	OFF	ON	ON	OFF	ON	OFF	OFF	OFF	OFF
indirizzo 46	OFF	ON	OFF	ON	OFF	ON	ON	ON	OFF	ON	OFF	OFF	OFF	OFF
indirizzo 47	OFF	ON	OFF	ON	ON	ON	ON	ON	OFF	ON	OFF	OFF	OFF	OFF
indirizzo 48	OFF	ON	OFF	ON	OFF	OFF	OFF	OFF	ON	ON	OFF	OFF	OFF	OFF
indirizzo 49	OFF	ON	OFF	ON	ON	OFF	OFF	OFF	ON	ON	OFF	OFF	OFF	OFF
indirizzo 50	OFF	ON	OFF	ON	OFF	ON	OFF	OFF	ON	ON	OFF	OFF	OFF	OFF
indirizzo 51	OFF	ON	OFF	ON	ON	ON	OFF	OFF	ON	ON	OFF	OFF	OFF	OFF
indirizzo 52	OFF	ON	OFF	ON	OFF	OFF	ON	OFF	ON	ON	OFF	OFF	OFF	OFF
indirizzo 53	OFF	ON	OFF	ON	ON	OFF	ON	OFF	ON	ON	OFF	OFF	OFF	OFF
indirizzo 54	OFF	ON	OFF	ON	OFF	ON	ON	OFF	ON	ON	OFF	OFF	OFF	OFF
indirizzo 55	OFF	ON	OFF	ON	ON	ON	ON	OFF	ON	ON	OFF	OFF	OFF	OFF
indirizzo 56	OFF	ON	OFF	ON	OFF	OFF	OFF	ON	ON	ON	OFF	OFF	OFF	OFF
indirizzo 57	OFF	ON	OFF	ON	ON	OFF	OFF	ON	ON	ON	OFF	OFF	OFF	OFF
indirizzo 58	OFF	ON	OFF	ON	OFF	ON	OFF	ON	ON	ON	OFF	OFF	OFF	OFF
indirizzo 59	OFF	ON	OFF	ON	ON	ON	OFF	ON	ON	ON	OFF	OFF	OFF	OFF
indirizzo 60	OFF	ON	OFF	ON	OFF	OFF	ON	ON	ON	ON	OFF	OFF	OFF	OFF
indirizzo 61	OFF	ON	OFF	ON	ON	OFF	ON	ON	ON	ON	OFF	OFF	OFF	OFF
indirizzo 62	OFF	ON	OFF	ON	OFF	ON	ON	ON	ON	ON	OFF	OFF	OFF	OFF
indirizzo 63	OFF	ON	OFF	ON	ON	ON	ON	ON	ON	ON	OFF	OFF	OFF	OFF
indirizzo 64	OFF	ON	OFF	ON	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF	OFF
indirizzo 65	OFF	ON	OFF	ON	ON	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF	OFF
indirizzo 66	OFF	ON	OFF	ON	OFF	ON	OFF	OFF	OFF	OFF	ON	OFF	OFF	OFF
indirizzo 67	OFF	ON	OFF	ON	ON	ON	OFF	OFF	OFF	OFF	ON	OFF	OFF	OFF
indirizzo 68	OFF	ON	OFF	ON	OFF	OFF	ON	OFF	OFF	OFF	ON	OFF	OFF	OFF
indirizzo 69	OFF	ON	OFF	ON	ON	OFF	ON	OFF	OFF	OFF	ON	OFF	OFF	OFF
indirizzo 70	OFF	ON	OFF	ON	OFF	ON	ON	OFF	OFF	OFF	ON	OFF	OFF	OFF
indirizzo 71	OFF	ON	OFF	ON	ON	ON	ON	OFF	OFF	OFF	ON	OFF	OFF	OFF
indirizzo 72	OFF	ON	OFF	ON	OFF	OFF	OFF	ON	OFF	OFF	ON	OFF	OFF	OFF
indirizzo 73	OFF	ON	OFF	ON	ON	OFF	OFF	ON	OFF	OFF	ON	OFF	OFF	OFF
indirizzo 74	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	OFF	ON	OFF	OFF	OFF
indirizzo 75	OFF	ON	OFF	ON	ON	ON	OFF	ON	OFF	OFF	ON	OFF	OFF	OFF
indirizzo 76	OFF	ON	OFF	ON	OFF	OFF	ON	ON	OFF	OFF	ON	OFF	OFF	OFF
indirizzo 77	OFF	ON	OFF	ON	ON	OFF	ON	ON	OFF	OFF	ON	OFF	OFF	OFF
indirizzo 78	OFF	ON	OFF	ON	OFF	ON	ON	ON	OFF	OFF	ON	OFF	OFF	OFF
indirizzo 79	OFF	ON	OFF	ON	ON	ON	ON	ON	OFF	OFF	ON	OFF	OFF	OFF
indirizzo 80	OFF	ON	OFF	ON	OFF	OFF	OFF	OFF	ON	OFF	ON	OFF	OFF	OFF
indirizzo 81	OFF	ON	OFF	ON	ON	OFF	OFF	OFF	ON	OFF	ON	OFF	OFF	OFF
indirizzo 82	OFF	ON	OFF	ON	OFF	ON	OFF	OFF	ON	OFF	ON	OFF	OFF	OFF
indirizzo 83	OFF	ON	OFF	ON	ON	ON	OFF	OFF	ON	OFF	ON	OFF	OFF	OFF
indirizzo 84	OFF	ON	OFF	ON	OFF	OFF	ON	OFF	ON	OFF	ON	OFF	OFF	OFF
indirizzo 85	OFF	ON	OFF	ON	ON	OFF	ON	OFF	ON	OFF	ON	OFF	OFF	OFF
indirizzo 86	OFF	ON	OFF	ON	OFF	ON	ON	OFF	ON	OFF	ON	OFF	OFF	OFF

INDIRIZZO DMX														
CONFIGURAZIONI	A	B	C	D	1	2	3	4	5	6	7	8	9	10
indirizzo 87	OFF	ON	OFF	ON	ON	ON	ON	OFF	ON	OFF	ON	OFF	OFF	OFF
indirizzo 88	OFF	ON	OFF	ON	OFF	OFF	OFF	ON	ON	OFF	ON	OFF	OFF	OFF
indirizzo 89	OFF	ON	OFF	ON	ON	OFF	OFF	ON	ON	OFF	ON	OFF	OFF	OFF
indirizzo 90	OFF	ON	OFF	ON	OFF	ON	OFF	ON	ON	OFF	ON	OFF	OFF	OFF
indirizzo 91	OFF	ON	OFF	ON	ON	ON	OFF	ON	ON	OFF	ON	OFF	OFF	OFF
indirizzo 92	OFF	ON	OFF	ON	OFF	OFF	ON	ON	ON	OFF	ON	OFF	OFF	OFF
indirizzo 93	OFF	ON	OFF	ON	ON	OFF	ON	ON	ON	OFF	ON	OFF	OFF	OFF
indirizzo 94	OFF	ON	OFF	ON	OFF	ON	ON	ON	ON	OFF	ON	OFF	OFF	OFF
indirizzo 95	OFF	ON	OFF	ON	ON	ON	ON	ON	ON	OFF	ON	OFF	OFF	OFF
indirizzo 96	OFF	ON	OFF	ON	OFF	OFF	OFF	OFF	OFF	ON	ON	OFF	OFF	OFF
indirizzo 97	OFF	ON	OFF	ON	ON	OFF	OFF	OFF	OFF	ON	ON	OFF	OFF	OFF
indirizzo 98	OFF	ON	OFF	ON	OFF	ON	OFF	OFF	OFF	ON	ON	OFF	OFF	OFF
indirizzo 99	OFF	ON	OFF	ON	ON	ON	OFF	OFF	OFF	ON	ON	OFF	OFF	OFF
indirizzo 100	OFF	ON	OFF	ON	OFF	OFF	ON	OFF	OFF	ON	ON	OFF	OFF	OFF
indirizzo 101	OFF	ON	OFF	ON	ON	OFF	ON	OFF	OFF	ON	ON	OFF	OFF	OFF
indirizzo 102	OFF	ON	OFF	ON	OFF	ON	ON	OFF	OFF	ON	ON	OFF	OFF	OFF
indirizzo 103	OFF	ON	OFF	ON	ON	ON	ON	OFF	OFF	ON	ON	OFF	OFF	OFF
indirizzo 104	OFF	ON	OFF	ON	OFF	OFF	OFF	ON	OFF	ON	ON	OFF	OFF	OFF
indirizzo 105	OFF	ON	OFF	ON	ON	OFF	OFF	ON	OFF	ON	ON	OFF	OFF	OFF
indirizzo 106	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	ON	OFF	OFF	OFF
indirizzo 107	OFF	ON	OFF	ON	ON	ON	OFF	ON	OFF	ON	ON	OFF	OFF	OFF
indirizzo 108	OFF	ON	OFF	ON	OFF	OFF	ON	ON	OFF	ON	ON	OFF	OFF	OFF
indirizzo 109	OFF	ON	OFF	ON	ON	OFF	ON	ON	OFF	ON	ON	OFF	OFF	OFF
indirizzo 110	OFF	ON	OFF	ON	OFF	ON	ON	ON	OFF	ON	ON	OFF	OFF	OFF
indirizzo 111	OFF	ON	OFF	ON	ON	ON	ON	ON	OFF	ON	ON	OFF	OFF	OFF
indirizzo 112	OFF	ON	OFF	ON	OFF	OFF	OFF	OFF	ON	ON	ON	OFF	OFF	OFF
indirizzo 113	OFF	ON	OFF	ON	ON	OFF	OFF	OFF	ON	ON	ON	OFF	OFF	OFF
indirizzo 114	OFF	ON	OFF	ON	OFF	ON	OFF	OFF	ON	ON	ON	OFF	OFF	OFF
indirizzo 115	OFF	ON	OFF	ON	ON	ON	OFF	OFF	ON	ON	ON	OFF	OFF	OFF
indirizzo 116	OFF	ON	OFF	ON	OFF	OFF	ON	OFF	ON	ON	ON	OFF	OFF	OFF
indirizzo 117	OFF	ON	OFF	ON	ON	OFF	ON	OFF	ON	ON	ON	OFF	OFF	OFF
indirizzo 118	OFF	ON	OFF	ON	OFF	ON	ON	OFF	ON	ON	ON	OFF	OFF	OFF
indirizzo 119	OFF	ON	OFF	ON	ON	ON	ON	OFF	ON	ON	ON	OFF	OFF	OFF
indirizzo 120	OFF	ON	OFF	ON	OFF	OFF	OFF	ON	ON	ON	ON	OFF	OFF	OFF
indirizzo 121	OFF	ON	OFF	ON	ON	OFF	OFF	ON	ON	ON	ON	OFF	OFF	OFF
indirizzo 122	OFF	ON	OFF	ON	OFF	ON	OFF	ON	ON	ON	ON	OFF	OFF	OFF
indirizzo 123	OFF	ON	OFF	ON	ON	ON	OFF	ON	ON	ON	ON	OFF	OFF	OFF
indirizzo 124	OFF	ON	OFF	ON	OFF	OFF	ON	ON	ON	ON	ON	OFF	OFF	OFF
indirizzo 125	OFF	ON	OFF	ON	ON	OFF	ON	ON	ON	ON	ON	OFF	OFF	OFF
indirizzo 126	OFF	ON	OFF	ON	OFF	ON	ON	ON	ON	ON	ON	OFF	OFF	OFF
indirizzo 127	OFF	ON	OFF	ON	ON	ON	ON	ON	ON	ON	ON	OFF	OFF	OFF
indirizzo 128	OFF	ON	OFF	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF
indirizzo 129	OFF	ON	OFF	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF

INDIRIZZO DMX														
CONFIGURAZIONI	A	B	C	D	1	2	3	4	5	6	7	8	9	10
indirizzo 130	OFF	ON	OFF	ON	OFF	ON	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF
indirizzo 131	OFF	ON	OFF	ON	ON	ON	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF
indirizzo 132	OFF	ON	OFF	ON	OFF	OFF	ON	OFF	OFF	OFF	OFF	ON	OFF	OFF
indirizzo 133	OFF	ON	OFF	ON	ON	OFF	ON	OFF	OFF	OFF	OFF	ON	OFF	OFF
indirizzo 134	OFF	ON	OFF	ON	OFF	ON	ON	OFF	OFF	OFF	OFF	ON	OFF	OFF
indirizzo 135	OFF	ON	OFF	ON	ON	ON	ON	OFF	OFF	OFF	OFF	ON	OFF	OFF
indirizzo 136	OFF	ON	OFF	ON	OFF	OFF	OFF	ON	OFF	OFF	OFF	ON	OFF	OFF
indirizzo 137	OFF	ON	OFF	ON	ON	OFF	OFF	ON	OFF	OFF	OFF	ON	OFF	OFF
indirizzo 138	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	OFF	OFF	ON	OFF	OFF
indirizzo 139	OFF	ON	OFF	ON	ON	ON	OFF	ON	OFF	OFF	OFF	ON	OFF	OFF
indirizzo 140	OFF	ON	OFF	ON	OFF	OFF	ON	ON	OFF	OFF	OFF	ON	OFF	OFF
indirizzo 141	OFF	ON	OFF	ON	ON	OFF	ON	ON	OFF	OFF	OFF	ON	OFF	OFF
indirizzo 142	OFF	ON	OFF	ON	OFF	ON	ON	ON	OFF	OFF	OFF	ON	OFF	OFF
indirizzo 143	OFF	ON	OFF	ON	ON	ON	ON	ON	OFF	OFF	OFF	ON	OFF	OFF
indirizzo 144	OFF	ON	OFF	ON	OFF	OFF	OFF	OFF	ON	OFF	OFF	ON	OFF	OFF
indirizzo 145	OFF	ON	OFF	ON	ON	OFF	OFF	OFF	ON	OFF	OFF	ON	OFF	OFF
indirizzo 146	OFF	ON	OFF	ON	OFF	ON	OFF	OFF	ON	OFF	OFF	ON	OFF	OFF
indirizzo 147	OFF	ON	OFF	ON	ON	ON	OFF	OFF	ON	OFF	OFF	ON	OFF	OFF
indirizzo 148	OFF	ON	OFF	ON	OFF	OFF	ON	OFF	ON	OFF	OFF	ON	OFF	OFF
indirizzo 149	OFF	ON	OFF	ON	ON	OFF	ON	OFF	ON	OFF	OFF	ON	OFF	OFF
indirizzo 150	OFF	ON	OFF	ON	OFF	ON	ON	OFF	ON	OFF	OFF	ON	OFF	OFF
indirizzo 151	OFF	ON	OFF	ON	ON	ON	ON	OFF	ON	OFF	OFF	ON	OFF	OFF
indirizzo 152	OFF	ON	OFF	ON	OFF	OFF	OFF	ON	ON	OFF	OFF	ON	OFF	OFF
indirizzo 153	OFF	ON	OFF	ON	ON	OFF	OFF	ON	ON	OFF	OFF	ON	OFF	OFF
indirizzo 154	OFF	ON	OFF	ON	OFF	ON	OFF	ON	ON	OFF	OFF	ON	OFF	OFF
indirizzo 155	OFF	ON	OFF	ON	ON	ON	OFF	ON	ON	OFF	OFF	ON	OFF	OFF
indirizzo 156	OFF	ON	OFF	ON	OFF	OFF	ON	ON	ON	OFF	OFF	ON	OFF	OFF
indirizzo 157	OFF	ON	OFF	ON	ON	OFF	ON	ON	ON	OFF	OFF	ON	OFF	OFF
indirizzo 158	OFF	ON	OFF	ON	OFF	ON	ON	ON	ON	OFF	OFF	ON	OFF	OFF
indirizzo 159	OFF	ON	OFF	ON	ON	ON	ON	ON	ON	OFF	OFF	ON	OFF	OFF
indirizzo 160	OFF	ON	OFF	ON	OFF	OFF	OFF	OFF	OFF	ON	OFF	ON	OFF	OFF
indirizzo 161	OFF	ON	OFF	ON	ON	OFF	OFF	OFF	OFF	ON	OFF	ON	OFF	OFF
indirizzo 162	OFF	ON	OFF	ON	OFF	ON	OFF	OFF	OFF	ON	OFF	ON	OFF	OFF
indirizzo 163	OFF	ON	OFF	ON	ON	ON	OFF	OFF	OFF	ON	OFF	ON	OFF	OFF
indirizzo 164	OFF	ON	OFF	ON	OFF	OFF	ON	OFF	OFF	ON	OFF	ON	OFF	OFF
indirizzo 165	OFF	ON	OFF	ON	ON	OFF	ON	OFF	OFF	ON	OFF	ON	OFF	OFF
indirizzo 166	OFF	ON	OFF	ON	OFF	ON	ON	OFF	OFF	ON	OFF	ON	OFF	OFF
indirizzo 167	OFF	ON	OFF	ON	ON	ON	ON	OFF	OFF	ON	OFF	ON	OFF	OFF
indirizzo 168	OFF	ON	OFF	ON	OFF	OFF	OFF	ON	OFF	ON	OFF	ON	OFF	OFF
indirizzo 169	OFF	ON	OFF	ON	ON	OFF	OFF	ON	OFF	ON	OFF	ON	OFF	OFF
indirizzo 170	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	OFF
indirizzo 171	OFF	ON	OFF	ON	ON	ON	OFF	ON	OFF	ON	OFF	ON	OFF	OFF
indirizzo 172	OFF	ON	OFF	ON	OFF	OFF	ON	ON	OFF	ON	OFF	ON	OFF	OFF

INDIRIZZO DMX														
CONFIGURAZIONI	A	B	C	D	1	2	3	4	5	6	7	8	9	10
indirizzo 173	OFF	ON	OFF	ON	ON	OFF	ON	ON	OFF	ON	OFF	ON	OFF	OFF
indirizzo 174	OFF	ON	OFF	ON	OFF	ON	ON	ON	OFF	ON	OFF	ON	OFF	OFF
indirizzo 175	OFF	ON	OFF	ON	ON	ON	ON	ON	OFF	ON	OFF	ON	OFF	OFF
indirizzo 176	OFF	ON	OFF	ON	OFF	OFF	OFF	OFF	ON	ON	OFF	ON	OFF	OFF
indirizzo 177	OFF	ON	OFF	ON	ON	OFF	OFF	OFF	ON	ON	OFF	ON	OFF	OFF
indirizzo 178	OFF	ON	OFF	ON	OFF	ON	OFF	OFF	ON	ON	OFF	ON	OFF	OFF
indirizzo 179	OFF	ON	OFF	ON	ON	ON	OFF	OFF	ON	ON	OFF	ON	OFF	OFF
indirizzo 180	OFF	ON	OFF	ON	OFF	OFF	ON	OFF	ON	ON	OFF	ON	OFF	OFF
indirizzo 181	OFF	ON	OFF	ON	ON	OFF	ON	OFF	ON	ON	OFF	ON	OFF	OFF
indirizzo 182	OFF	ON	OFF	ON	OFF	ON	ON	OFF	ON	ON	OFF	ON	OFF	OFF
indirizzo 183	OFF	ON	OFF	ON	ON	ON	ON	OFF	ON	ON	OFF	ON	OFF	OFF
indirizzo 184	OFF	ON	OFF	ON	OFF	OFF	OFF	ON	ON	ON	OFF	ON	OFF	OFF
indirizzo 185	OFF	ON	OFF	ON	ON	OFF	OFF	ON	ON	ON	OFF	ON	OFF	OFF
indirizzo 186	OFF	ON	OFF	ON	OFF	ON	OFF	ON	ON	ON	OFF	ON	OFF	OFF
indirizzo 187	OFF	ON	OFF	ON	ON	ON	OFF	ON	ON	ON	OFF	ON	OFF	OFF
indirizzo 188	OFF	ON	OFF	ON	OFF	OFF	ON	ON	ON	ON	OFF	ON	OFF	OFF
indirizzo 189	OFF	ON	OFF	ON	ON	OFF	ON	ON	ON	ON	OFF	ON	OFF	OFF
indirizzo 190	OFF	ON	OFF	ON	OFF	ON	ON	ON	ON	ON	OFF	ON	OFF	OFF
indirizzo 191	OFF	ON	OFF	ON	ON	ON	ON	ON	ON	ON	OFF	ON	OFF	OFF
indirizzo 192	OFF	ON	OFF	ON	OFF	OFF	OFF	OFF	OFF	OFF	ON	ON	OFF	OFF
indirizzo 193	OFF	ON	OFF	ON	ON	OFF	OFF	OFF	OFF	OFF	ON	ON	OFF	OFF
indirizzo 194	OFF	ON	OFF	ON	OFF	ON	OFF	OFF	OFF	OFF	ON	ON	OFF	OFF
indirizzo 195	OFF	ON	OFF	ON	ON	ON	OFF	OFF	OFF	OFF	ON	ON	OFF	OFF
indirizzo 196	OFF	ON	OFF	ON	OFF	OFF	ON	OFF	OFF	OFF	ON	ON	OFF	OFF
indirizzo 197	OFF	ON	OFF	ON	ON	OFF	ON	OFF	OFF	OFF	ON	ON	OFF	OFF
indirizzo 198	OFF	ON	OFF	ON	OFF	ON	ON	OFF	OFF	OFF	ON	ON	OFF	OFF
indirizzo 199	OFF	ON	OFF	ON	ON	ON	ON	OFF	OFF	OFF	ON	ON	OFF	OFF
indirizzo 200	OFF	ON	OFF	ON	OFF	OFF	OFF	ON	OFF	OFF	ON	ON	OFF	OFF
indirizzo 201	OFF	ON	OFF	ON	ON	OFF	OFF	ON	OFF	OFF	ON	ON	OFF	OFF
indirizzo 202	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	OFF	ON	ON	OFF	OFF
indirizzo 203	OFF	ON	OFF	ON	ON	ON	OFF	ON	OFF	OFF	ON	ON	OFF	OFF
indirizzo 204	OFF	ON	OFF	ON	OFF	OFF	ON	ON	OFF	OFF	ON	ON	OFF	OFF
indirizzo 205	OFF	ON	OFF	ON	ON	OFF	ON	ON	OFF	OFF	ON	ON	OFF	OFF
indirizzo 206	OFF	ON	OFF	ON	OFF	ON	ON	ON	OFF	OFF	ON	ON	OFF	OFF
indirizzo 207	OFF	ON	OFF	ON	ON	ON	ON	ON	OFF	OFF	ON	ON	OFF	OFF
indirizzo 208	OFF	ON	OFF	ON	OFF	OFF	OFF	OFF	ON	OFF	ON	ON	OFF	OFF
indirizzo 209	OFF	ON	OFF	ON	ON	OFF	OFF	OFF	ON	OFF	ON	ON	OFF	OFF
indirizzo 210	OFF	ON	OFF	ON	OFF	ON	OFF	OFF	ON	OFF	ON	ON	OFF	OFF
indirizzo 211	OFF	ON	OFF	ON	ON	ON	OFF	OFF	ON	OFF	ON	ON	OFF	OFF
indirizzo 212	OFF	ON	OFF	ON	OFF	OFF	ON	OFF	ON	OFF	ON	ON	OFF	OFF
indirizzo 213	OFF	ON	OFF	ON	ON	OFF	ON	OFF	ON	OFF	ON	ON	OFF	OFF
indirizzo 214	OFF	ON	OFF	ON	OFF	ON	ON	OFF	ON	OFF	ON	ON	OFF	OFF
indirizzo 215	OFF	ON	OFF	ON	ON	ON	ON	OFF	ON	OFF	ON	ON	OFF	OFF

INDIRIZZO DMX														
CONFIGURAZIONI	A	B	C	D	1	2	3	4	5	6	7	8	9	10
indirizzo 216	OFF	ON	OFF	ON	OFF	OFF	OFF	ON	ON	OFF	ON	ON	OFF	OFF
indirizzo 217	OFF	ON	OFF	ON	ON	OFF	OFF	ON	ON	OFF	ON	ON	OFF	OFF
indirizzo 218	OFF	ON	OFF	ON	OFF	ON	OFF	ON	ON	OFF	ON	ON	OFF	OFF
indirizzo 219	OFF	ON	OFF	ON	ON	ON	OFF	ON	ON	OFF	ON	ON	OFF	OFF
indirizzo 220	OFF	ON	OFF	ON	OFF	OFF	ON	ON	ON	OFF	ON	ON	OFF	OFF
indirizzo 221	OFF	ON	OFF	ON	ON	OFF	ON	ON	ON	OFF	ON	ON	OFF	OFF
indirizzo 222	OFF	ON	OFF	ON	OFF	ON	ON	ON	ON	OFF	ON	ON	OFF	OFF
indirizzo 223	OFF	ON	OFF	ON	ON	ON	ON	ON	ON	OFF	ON	ON	OFF	OFF
indirizzo 224	OFF	ON	OFF	ON	OFF	OFF	OFF	OFF	OFF	ON	ON	ON	OFF	OFF
indirizzo 225	OFF	ON	OFF	ON	ON	OFF	OFF	OFF	OFF	ON	ON	ON	OFF	OFF
indirizzo 226	OFF	ON	OFF	ON	OFF	ON	OFF	OFF	OFF	ON	ON	ON	OFF	OFF
indirizzo 227	OFF	ON	OFF	ON	ON	ON	OFF	OFF	OFF	ON	ON	ON	OFF	OFF
indirizzo 228	OFF	ON	OFF	ON	OFF	OFF	ON	OFF	OFF	ON	ON	ON	OFF	OFF
indirizzo 229	OFF	ON	OFF	ON	ON	OFF	ON	OFF	OFF	ON	ON	ON	OFF	OFF
indirizzo 230	OFF	ON	OFF	ON	OFF	ON	ON	OFF	OFF	ON	ON	ON	OFF	OFF
indirizzo 231	OFF	ON	OFF	ON	ON	ON	ON	OFF	OFF	ON	ON	ON	OFF	OFF
indirizzo 232	OFF	ON	OFF	ON	OFF	OFF	OFF	ON	OFF	ON	ON	ON	OFF	OFF
indirizzo 233	OFF	ON	OFF	ON	ON	OFF	OFF	ON	OFF	ON	ON	ON	OFF	OFF
indirizzo 234	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	ON	ON	OFF	OFF
indirizzo 235	OFF	ON	OFF	ON	ON	ON	OFF	ON	OFF	ON	ON	ON	OFF	OFF
indirizzo 236	OFF	ON	OFF	ON	OFF	OFF	ON	ON	OFF	ON	ON	ON	OFF	OFF
indirizzo 237	OFF	ON	OFF	ON	ON	OFF	ON	ON	OFF	ON	ON	ON	OFF	OFF
indirizzo 238	OFF	ON	OFF	ON	OFF	ON	ON	ON	OFF	ON	ON	ON	OFF	OFF
indirizzo 239	OFF	ON	OFF	ON	ON	ON	ON	ON	OFF	ON	ON	ON	OFF	OFF
indirizzo 240	OFF	ON	OFF	ON	OFF	OFF	OFF	OFF	ON	ON	ON	ON	OFF	OFF
indirizzo 241	OFF	ON	OFF	ON	ON	OFF	OFF	OFF	ON	ON	ON	ON	OFF	OFF
indirizzo 242	OFF	ON	OFF	ON	OFF	ON	OFF	OFF	ON	ON	ON	ON	OFF	OFF
indirizzo 243	OFF	ON	OFF	ON	ON	ON	OFF	OFF	ON	ON	ON	ON	OFF	OFF
indirizzo 244	OFF	ON	OFF	ON	OFF	OFF	ON	OFF	ON	ON	ON	ON	OFF	OFF
indirizzo 245	OFF	ON	OFF	ON	ON	OFF	ON	OFF	ON	ON	ON	ON	OFF	OFF
indirizzo 246	OFF	ON	OFF	ON	OFF	ON	ON	OFF	ON	ON	ON	ON	OFF	OFF
indirizzo 247	OFF	ON	OFF	ON	ON	ON	ON	OFF	ON	ON	ON	ON	OFF	OFF
indirizzo 248	OFF	ON	OFF	ON	OFF	OFF	OFF	ON	ON	ON	ON	ON	OFF	OFF
indirizzo 249	OFF	ON	OFF	ON	ON	OFF	OFF	ON	ON	ON	ON	ON	OFF	OFF
indirizzo 250	OFF	ON	OFF	ON	OFF	ON	OFF	ON	ON	ON	ON	ON	OFF	OFF
indirizzo 251	OFF	ON	OFF	ON	ON	ON	OFF	ON	ON	ON	ON	ON	OFF	OFF
indirizzo 252	OFF	ON	OFF	ON	OFF	OFF	ON	ON	ON	ON	ON	ON	OFF	OFF
indirizzo 253	OFF	ON	OFF	ON	ON	OFF	ON	ON	ON	ON	ON	ON	OFF	OFF
indirizzo 254	OFF	ON	OFF	ON	OFF	ON	ON	ON	ON	ON	ON	ON	OFF	OFF
indirizzo 255	OFF	ON	OFF	ON	ON	ON	ON	ON	ON	ON	ON	ON	OFF	OFF
indirizzo 256	OFF	ON	OFF	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF
indirizzo 257	OFF	ON	OFF	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF
indirizzo 258	OFF	ON	OFF	ON	OFF	ON	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF

INDIRIZZO DMX														
CONFIGURAZIONI	A	B	C	D	1	2	3	4	5	6	7	8	9	10
indirizzo 259	OFF	ON	OFF	ON	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF
indirizzo 260	OFF	ON	OFF	ON	OFF	OFF	ON	OFF	OFF	OFF	OFF	OFF	ON	OFF
indirizzo 261	OFF	ON	OFF	ON	ON	OFF	ON	OFF	OFF	OFF	OFF	OFF	ON	OFF
indirizzo 262	OFF	ON	OFF	ON	OFF	ON	ON	OFF	OFF	OFF	OFF	OFF	ON	OFF
indirizzo 263	OFF	ON	OFF	ON	ON	ON	ON	OFF	OFF	OFF	OFF	OFF	ON	OFF
indirizzo 264	OFF	ON	OFF	ON	OFF	OFF	OFF	ON	OFF	OFF	OFF	OFF	ON	OFF
indirizzo 265	OFF	ON	OFF	ON	ON	OFF	OFF	ON	OFF	OFF	OFF	OFF	ON	OFF
indirizzo 266	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	OFF	OFF	OFF	ON	OFF
indirizzo 267	OFF	ON	OFF	ON	ON	ON	OFF	ON	OFF	OFF	OFF	OFF	ON	OFF
indirizzo 268	OFF	ON	OFF	ON	OFF	OFF	ON	ON	OFF	OFF	OFF	OFF	ON	OFF
indirizzo 269	OFF	ON	OFF	ON	ON	OFF	ON	ON	OFF	OFF	OFF	OFF	ON	OFF
indirizzo 270	OFF	ON	OFF	ON	OFF	ON	ON	ON	OFF	OFF	OFF	OFF	ON	OFF
indirizzo 271	OFF	ON	OFF	ON	ON	ON	ON	ON	OFF	OFF	OFF	OFF	ON	OFF
indirizzo 272	OFF	ON	OFF	ON	OFF	OFF	OFF	OFF	ON	OFF	OFF	OFF	ON	OFF
indirizzo 273	OFF	ON	OFF	ON	ON	OFF	OFF	OFF	ON	OFF	OFF	OFF	ON	OFF
indirizzo 274	OFF	ON	OFF	ON	OFF	ON	OFF	OFF	ON	OFF	OFF	OFF	ON	OFF
indirizzo 275	OFF	ON	OFF	ON	ON	ON	OFF	OFF	ON	OFF	OFF	OFF	ON	OFF
indirizzo 276	OFF	ON	OFF	ON	OFF	OFF	ON	OFF	ON	OFF	OFF	OFF	ON	OFF
indirizzo 277	OFF	ON	OFF	ON	ON	OFF	ON	OFF	ON	OFF	OFF	OFF	ON	OFF
indirizzo 278	OFF	ON	OFF	ON	OFF	ON	ON	OFF	ON	OFF	OFF	OFF	ON	OFF
indirizzo 279	OFF	ON	OFF	ON	ON	ON	ON	OFF	ON	OFF	OFF	OFF	ON	OFF
indirizzo 280	OFF	ON	OFF	ON	OFF	OFF	OFF	ON	ON	OFF	OFF	OFF	ON	OFF
indirizzo 281	OFF	ON	OFF	ON	ON	OFF	OFF	ON	ON	OFF	OFF	OFF	ON	OFF
indirizzo 282	OFF	ON	OFF	ON	OFF	ON	OFF	ON	ON	OFF	OFF	OFF	ON	OFF
indirizzo 283	OFF	ON	OFF	ON	ON	ON	OFF	ON	ON	OFF	OFF	OFF	ON	OFF
indirizzo 284	OFF	ON	OFF	ON	OFF	OFF	ON	ON	ON	OFF	OFF	OFF	ON	OFF
indirizzo 285	OFF	ON	OFF	ON	ON	OFF	ON	ON	ON	OFF	OFF	OFF	ON	OFF
indirizzo 286	OFF	ON	OFF	ON	OFF	ON	ON	ON	ON	OFF	OFF	OFF	ON	OFF
indirizzo 287	OFF	ON	OFF	ON	ON	ON	ON	ON	ON	OFF	OFF	OFF	ON	OFF
indirizzo 288	OFF	ON	OFF	ON	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF	ON	OFF
indirizzo 289	OFF	ON	OFF	ON	ON	OFF	OFF	OFF	OFF	ON	OFF	OFF	ON	OFF
indirizzo 290	OFF	ON	OFF	ON	OFF	ON	OFF	OFF	OFF	ON	OFF	OFF	ON	OFF
indirizzo 291	OFF	ON	OFF	ON	ON	ON	OFF	OFF	OFF	ON	OFF	OFF	ON	OFF
indirizzo 292	OFF	ON	OFF	ON	OFF	OFF	ON	OFF	OFF	ON	OFF	OFF	ON	OFF
indirizzo 293	OFF	ON	OFF	ON	ON	OFF	ON	OFF	OFF	ON	OFF	OFF	ON	OFF
indirizzo 294	OFF	ON	OFF	ON	OFF	ON	ON	OFF	OFF	ON	OFF	OFF	ON	OFF
indirizzo 295	OFF	ON	OFF	ON	ON	ON	ON	OFF	OFF	ON	OFF	OFF	ON	OFF
indirizzo 296	OFF	ON	OFF	ON	OFF	OFF	OFF	ON	OFF	ON	OFF	OFF	ON	OFF
indirizzo 297	OFF	ON	OFF	ON	ON	OFF	OFF	ON	OFF	ON	OFF	OFF	ON	OFF
indirizzo 298	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	OFF	ON	OFF
indirizzo 299	OFF	ON	OFF	ON	ON	ON	OFF	ON	OFF	ON	OFF	OFF	ON	OFF
indirizzo 300	OFF	ON	OFF	ON	OFF	OFF	ON	ON	OFF	ON	OFF	OFF	ON	OFF
indirizzo 301	OFF	ON	OFF	ON	ON	OFF	ON	ON	OFF	ON	OFF	OFF	ON	OFF

INDIRIZZO DMX														
CONFIGURAZIONI	A	B	C	D	1	2	3	4	5	6	7	8	9	10
indirizzo 302	OFF	ON	OFF	ON	OFF	ON	ON	ON	OFF	ON	OFF	OFF	ON	OFF
indirizzo 303	OFF	ON	OFF	ON	ON	ON	ON	ON	OFF	ON	OFF	OFF	ON	OFF
indirizzo 304	OFF	ON	OFF	ON	OFF	OFF	OFF	OFF	ON	ON	OFF	OFF	ON	OFF
indirizzo 305	OFF	ON	OFF	ON	ON	OFF	OFF	OFF	ON	ON	OFF	OFF	ON	OFF
indirizzo 306	OFF	ON	OFF	ON	OFF	ON	OFF	OFF	ON	ON	OFF	OFF	ON	OFF
indirizzo 307	OFF	ON	OFF	ON	ON	ON	OFF	OFF	ON	ON	OFF	OFF	ON	OFF
indirizzo 308	OFF	ON	OFF	ON	OFF	OFF	ON	OFF	ON	ON	OFF	OFF	ON	OFF
indirizzo 309	OFF	ON	OFF	ON	ON	OFF	ON	OFF	ON	ON	OFF	OFF	ON	OFF
indirizzo 310	OFF	ON	OFF	ON	OFF	ON	ON	OFF	ON	ON	OFF	OFF	ON	OFF
indirizzo 311	OFF	ON	OFF	ON	ON	ON	ON	OFF	ON	ON	OFF	OFF	ON	OFF
indirizzo 312	OFF	ON	OFF	ON	OFF	OFF	OFF	ON	ON	ON	OFF	OFF	ON	OFF
indirizzo 313	OFF	ON	OFF	ON	ON	OFF	OFF	ON	ON	ON	OFF	OFF	ON	OFF
indirizzo 314	OFF	ON	OFF	ON	OFF	ON	OFF	ON	ON	ON	OFF	OFF	ON	OFF
indirizzo 315	OFF	ON	OFF	ON	ON	ON	OFF	ON	ON	ON	OFF	OFF	ON	OFF
indirizzo 316	OFF	ON	OFF	ON	OFF	OFF	ON	ON	ON	ON	OFF	OFF	ON	OFF
indirizzo 317	OFF	ON	OFF	ON	ON	OFF	ON	ON	ON	ON	OFF	OFF	ON	OFF
indirizzo 318	OFF	ON	OFF	ON	OFF	ON	ON	ON	ON	ON	OFF	OFF	ON	OFF
indirizzo 319	OFF	ON	OFF	ON	ON	ON	ON	ON	ON	ON	OFF	OFF	ON	OFF
indirizzo 320	OFF	ON	OFF	ON	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF	ON	OFF
indirizzo 321	OFF	ON	OFF	ON	ON	OFF	OFF	OFF	OFF	OFF	ON	OFF	ON	OFF
indirizzo 322	OFF	ON	OFF	ON	OFF	ON	OFF	OFF	OFF	OFF	ON	OFF	ON	OFF
indirizzo 323	OFF	ON	OFF	ON	ON	ON	OFF	OFF	OFF	OFF	ON	OFF	ON	OFF
indirizzo 324	OFF	ON	OFF	ON	OFF	OFF	ON	OFF	OFF	OFF	ON	OFF	ON	OFF
indirizzo 325	OFF	ON	OFF	ON	ON	OFF	ON	OFF	OFF	OFF	ON	OFF	ON	OFF
indirizzo 326	OFF	ON	OFF	ON	OFF	ON	ON	OFF	OFF	OFF	ON	OFF	ON	OFF
indirizzo 327	OFF	ON	OFF	ON	ON	ON	ON	OFF	OFF	OFF	ON	OFF	ON	OFF
indirizzo 328	OFF	ON	OFF	ON	OFF	OFF	OFF	ON	OFF	OFF	ON	OFF	ON	OFF
indirizzo 329	OFF	ON	OFF	ON	ON	OFF	OFF	ON	OFF	OFF	ON	OFF	ON	OFF
indirizzo 330	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	OFF	ON	OFF	ON	OFF
indirizzo 331	OFF	ON	OFF	ON	ON	ON	OFF	ON	OFF	OFF	ON	OFF	ON	OFF
indirizzo 332	OFF	ON	OFF	ON	OFF	OFF	ON	ON	OFF	OFF	ON	OFF	ON	OFF
indirizzo 333	OFF	ON	OFF	ON	ON	OFF	ON	ON	OFF	OFF	ON	OFF	ON	OFF
indirizzo 334	OFF	ON	OFF	ON	OFF	ON	ON	ON	OFF	OFF	ON	OFF	ON	OFF
indirizzo 335	OFF	ON	OFF	ON	ON	ON	ON	ON	OFF	OFF	ON	OFF	ON	OFF
indirizzo 336	OFF	ON	OFF	ON	OFF	OFF	OFF	OFF	ON	OFF	ON	OFF	ON	OFF
indirizzo 337	OFF	ON	OFF	ON	ON	OFF	OFF	OFF	ON	OFF	ON	OFF	ON	OFF
indirizzo 338	OFF	ON	OFF	ON	OFF	ON	OFF	OFF	ON	OFF	ON	OFF	ON	OFF
indirizzo 339	OFF	ON	OFF	ON	ON	ON	OFF	OFF	ON	OFF	ON	OFF	ON	OFF
indirizzo 340	OFF	ON	OFF	ON	OFF	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF
indirizzo 341	OFF	ON	OFF	ON	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF
indirizzo 342	OFF	ON	OFF	ON	OFF	ON	ON	OFF	ON	OFF	ON	OFF	ON	OFF
indirizzo 343	OFF	ON	OFF	ON	ON	ON	ON	OFF	ON	OFF	ON	OFF	ON	OFF
indirizzo 344	OFF	ON	OFF	ON	OFF	OFF	OFF	ON	ON	OFF	ON	OFF	ON	OFF

INDIRIZZO DMX														
CONFIGURAZIONI	A	B	C	D	1	2	3	4	5	6	7	8	9	10
indirizzo 345	OFF	ON	OFF	ON	ON	OFF	OFF	ON	ON	OFF	ON	OFF	ON	OFF
indirizzo 346	OFF	ON	OFF	ON	OFF	ON	OFF	ON	ON	OFF	ON	OFF	ON	OFF
indirizzo 347	OFF	ON	OFF	ON	ON	ON	OFF	ON	ON	OFF	ON	OFF	ON	OFF
indirizzo 348	OFF	ON	OFF	ON	OFF	OFF	ON	ON	ON	OFF	ON	OFF	ON	OFF
indirizzo 349	OFF	ON	OFF	ON	ON	OFF	ON	ON	ON	OFF	ON	OFF	ON	OFF
indirizzo 350	OFF	ON	OFF	ON	OFF	ON	ON	ON	ON	OFF	ON	OFF	ON	OFF
indirizzo 351	OFF	ON	OFF	ON	ON	ON	ON	ON	ON	OFF	ON	OFF	ON	OFF
indirizzo 352	OFF	ON	OFF	ON	OFF	OFF	OFF	OFF	OFF	ON	ON	OFF	ON	OFF
indirizzo 353	OFF	ON	OFF	ON	ON	OFF	OFF	OFF	OFF	ON	ON	OFF	ON	OFF
indirizzo 354	OFF	ON	OFF	ON	OFF	ON	OFF	OFF	OFF	ON	ON	OFF	ON	OFF
indirizzo 355	OFF	ON	OFF	ON	ON	ON	OFF	OFF	OFF	ON	ON	OFF	ON	OFF
indirizzo 356	OFF	ON	OFF	ON	OFF	OFF	ON	OFF	OFF	ON	ON	OFF	ON	OFF
indirizzo 357	OFF	ON	OFF	ON	ON	OFF	ON	OFF	OFF	ON	ON	OFF	ON	OFF
indirizzo 358	OFF	ON	OFF	ON	OFF	ON	ON	OFF	OFF	ON	ON	OFF	ON	OFF
indirizzo 359	OFF	ON	OFF	ON	ON	ON	ON	OFF	OFF	ON	ON	OFF	ON	OFF
indirizzo 360	OFF	ON	OFF	ON	OFF	OFF	OFF	ON	OFF	ON	ON	OFF	ON	OFF
indirizzo 361	OFF	ON	OFF	ON	ON	OFF	OFF	ON	OFF	ON	ON	OFF	ON	OFF
indirizzo 362	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	ON	OFF	ON	OFF
indirizzo 363	OFF	ON	OFF	ON	ON	ON	OFF	ON	OFF	ON	ON	OFF	ON	OFF
indirizzo 364	OFF	ON	OFF	ON	OFF	OFF	ON	ON	OFF	ON	ON	OFF	ON	OFF
indirizzo 365	OFF	ON	OFF	ON	ON	OFF	ON	ON	OFF	ON	ON	OFF	ON	OFF
indirizzo 366	OFF	ON	OFF	ON	OFF	ON	ON	ON	OFF	ON	ON	OFF	ON	OFF
indirizzo 367	OFF	ON	OFF	ON	ON	ON	ON	ON	OFF	ON	ON	OFF	ON	OFF
indirizzo 368	OFF	ON	OFF	ON	OFF	OFF	OFF	OFF	ON	ON	ON	OFF	ON	OFF
indirizzo 369	OFF	ON	OFF	ON	ON	OFF	OFF	OFF	ON	ON	ON	OFF	ON	OFF
indirizzo 370	OFF	ON	OFF	ON	OFF	ON	OFF	OFF	ON	ON	ON	OFF	ON	OFF
indirizzo 371	OFF	ON	OFF	ON	ON	ON	OFF	OFF	ON	ON	ON	OFF	ON	OFF
indirizzo 372	OFF	ON	OFF	ON	OFF	OFF	ON	OFF	ON	ON	ON	OFF	ON	OFF
indirizzo 373	OFF	ON	OFF	ON	ON	OFF	ON	OFF	ON	ON	ON	OFF	ON	OFF
indirizzo 374	OFF	ON	OFF	ON	OFF	ON	ON	OFF	ON	ON	ON	OFF	ON	OFF
indirizzo 375	OFF	ON	OFF	ON	ON	ON	ON	OFF	ON	ON	ON	OFF	ON	OFF
indirizzo 376	OFF	ON	OFF	ON	OFF	OFF	OFF	ON	ON	ON	ON	OFF	ON	OFF
indirizzo 377	OFF	ON	OFF	ON	ON	OFF	OFF	ON	ON	ON	ON	OFF	ON	OFF
indirizzo 378	OFF	ON	OFF	ON	OFF	ON	OFF	ON	ON	ON	ON	OFF	ON	OFF
indirizzo 379	OFF	ON	OFF	ON	ON	ON	OFF	ON	ON	ON	ON	OFF	ON	OFF
indirizzo 380	OFF	ON	OFF	ON	OFF	OFF	ON	ON	ON	ON	ON	OFF	ON	OFF
indirizzo 381	OFF	ON	OFF	ON	ON	OFF	ON	ON	ON	ON	ON	OFF	ON	OFF
indirizzo 382	OFF	ON	OFF	ON	OFF	ON	ON	ON	ON	ON	ON	OFF	ON	OFF
indirizzo 383	OFF	ON	OFF	ON	ON	ON	ON	ON	ON	ON	ON	OFF	ON	OFF
indirizzo 384	OFF	ON	OFF	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	ON	OFF
indirizzo 385	OFF	ON	OFF	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF	ON	ON	OFF
indirizzo 386	OFF	ON	OFF	ON	OFF	ON	OFF	OFF	OFF	OFF	OFF	ON	ON	OFF
indirizzo 387	OFF	ON	OFF	ON	ON	ON	OFF	OFF	OFF	OFF	OFF	ON	ON	OFF

INDIRIZZO DMX														
CONFIGURAZIONI	A	B	C	D	1	2	3	4	5	6	7	8	9	10
indirizzo 388	OFF	ON	OFF	ON	OFF	OFF	ON	OFF	OFF	OFF	OFF	ON	ON	OFF
indirizzo 389	OFF	ON	OFF	ON	ON	OFF	ON	OFF	OFF	OFF	OFF	ON	ON	OFF
indirizzo 390	OFF	ON	OFF	ON	OFF	ON	ON	OFF	OFF	OFF	OFF	ON	ON	OFF
indirizzo 391	OFF	ON	OFF	ON	ON	ON	ON	OFF	OFF	OFF	OFF	ON	ON	OFF
indirizzo 392	OFF	ON	OFF	ON	OFF	OFF	OFF	ON	OFF	OFF	OFF	ON	ON	OFF
indirizzo 393	OFF	ON	OFF	ON	ON	OFF	OFF	ON	OFF	OFF	OFF	ON	ON	OFF
indirizzo 394	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	OFF	OFF	ON	ON	OFF
indirizzo 395	OFF	ON	OFF	ON	ON	ON	OFF	ON	OFF	OFF	OFF	ON	ON	OFF
indirizzo 396	OFF	ON	OFF	ON	OFF	OFF	ON	ON	OFF	OFF	OFF	ON	ON	OFF
indirizzo 397	OFF	ON	OFF	ON	ON	OFF	ON	ON	OFF	OFF	OFF	ON	ON	OFF
indirizzo 398	OFF	ON	OFF	ON	OFF	ON	ON	ON	OFF	OFF	OFF	ON	ON	OFF
indirizzo 399	OFF	ON	OFF	ON	ON	ON	ON	ON	OFF	OFF	OFF	ON	ON	OFF
indirizzo 400	OFF	ON	OFF	ON	OFF	OFF	OFF	OFF	ON	OFF	OFF	ON	ON	OFF
indirizzo 401	OFF	ON	OFF	ON	ON	OFF	OFF	OFF	ON	OFF	OFF	ON	ON	OFF
indirizzo 402	OFF	ON	OFF	ON	OFF	ON	OFF	OFF	ON	OFF	OFF	ON	ON	OFF
indirizzo 403	OFF	ON	OFF	ON	ON	ON	OFF	OFF	ON	OFF	OFF	ON	ON	OFF
indirizzo 404	OFF	ON	OFF	ON	OFF	OFF	ON	OFF	ON	OFF	OFF	ON	ON	OFF
indirizzo 405	OFF	ON	OFF	ON	ON	OFF	ON	OFF	ON	OFF	OFF	ON	ON	OFF
indirizzo 406	OFF	ON	OFF	ON	OFF	ON	ON	OFF	ON	OFF	OFF	ON	ON	OFF
indirizzo 407	OFF	ON	OFF	ON	ON	ON	ON	OFF	ON	OFF	OFF	ON	ON	OFF
indirizzo 408	OFF	ON	OFF	ON	OFF	OFF	OFF	ON	ON	OFF	OFF	ON	ON	OFF
indirizzo 409	OFF	ON	OFF	ON	ON	OFF	OFF	ON	ON	OFF	OFF	ON	ON	OFF
indirizzo 410	OFF	ON	OFF	ON	OFF	ON	OFF	ON	ON	OFF	OFF	ON	ON	OFF
indirizzo 411	OFF	ON	OFF	ON	ON	ON	OFF	ON	ON	OFF	OFF	ON	ON	OFF
indirizzo 412	OFF	ON	OFF	ON	OFF	OFF	ON	ON	ON	OFF	OFF	ON	ON	OFF
indirizzo 413	OFF	ON	OFF	ON	ON	OFF	ON	ON	ON	OFF	OFF	ON	ON	OFF
indirizzo 414	OFF	ON	OFF	ON	OFF	ON	ON	ON	ON	OFF	OFF	ON	ON	OFF
indirizzo 415	OFF	ON	OFF	ON	ON	ON	ON	ON	ON	OFF	OFF	ON	ON	OFF
indirizzo 416	OFF	ON	OFF	ON	OFF	OFF	OFF	OFF	OFF	ON	OFF	ON	ON	OFF
indirizzo 417	OFF	ON	OFF	ON	ON	OFF	OFF	OFF	OFF	ON	OFF	ON	ON	OFF
indirizzo 418	OFF	ON	OFF	ON	OFF	ON	OFF	OFF	OFF	ON	OFF	ON	ON	OFF
indirizzo 419	OFF	ON	OFF	ON	ON	ON	OFF	OFF	OFF	ON	OFF	ON	ON	OFF
indirizzo 420	OFF	ON	OFF	ON	OFF	OFF	ON	OFF	OFF	ON	OFF	ON	ON	OFF
indirizzo 421	OFF	ON	OFF	ON	ON	OFF	ON	OFF	OFF	ON	OFF	ON	ON	OFF
indirizzo 422	OFF	ON	OFF	ON	OFF	ON	ON	OFF	OFF	ON	OFF	ON	ON	OFF
indirizzo 423	OFF	ON	OFF	ON	ON	ON	ON	OFF	OFF	ON	OFF	ON	ON	OFF
indirizzo 424	OFF	ON	OFF	ON	OFF	OFF	OFF	ON	OFF	ON	OFF	ON	ON	OFF
indirizzo 425	OFF	ON	OFF	ON	ON	OFF	OFF	ON	OFF	ON	OFF	ON	ON	OFF
indirizzo 426	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	ON	OFF
indirizzo 427	OFF	ON	OFF	ON	ON	ON	OFF	ON	OFF	ON	OFF	ON	ON	OFF
indirizzo 428	OFF	ON	OFF	ON	OFF	OFF	ON	ON	OFF	ON	OFF	ON	ON	OFF
indirizzo 429	OFF	ON	OFF	ON	ON	OFF	ON	ON	OFF	ON	OFF	ON	ON	OFF
indirizzo 430	OFF	ON	OFF	ON	OFF	ON	ON	ON	OFF	ON	OFF	ON	ON	OFF

INDIRIZZO DMX														
CONFIGURAZIONI	A	B	C	D	1	2	3	4	5	6	7	8	9	10
indirizzo 431	OFF	ON	OFF	ON	ON	ON	ON	ON	OFF	ON	OFF	ON	ON	OFF
indirizzo 432	OFF	ON	OFF	ON	OFF	OFF	OFF	OFF	ON	ON	OFF	ON	ON	OFF
indirizzo 433	OFF	ON	OFF	ON	ON	OFF	OFF	OFF	ON	ON	OFF	ON	ON	OFF
indirizzo 434	OFF	ON	OFF	ON	OFF	ON	OFF	OFF	ON	ON	OFF	ON	ON	OFF
indirizzo 435	OFF	ON	OFF	ON	ON	ON	OFF	OFF	ON	ON	OFF	ON	ON	OFF
indirizzo 436	OFF	ON	OFF	ON	OFF	OFF	ON	OFF	ON	ON	OFF	ON	ON	OFF
indirizzo 437	OFF	ON	OFF	ON	ON	OFF	ON	OFF	ON	ON	OFF	ON	ON	OFF
indirizzo 438	OFF	ON	OFF	ON	OFF	ON	ON	OFF	ON	ON	OFF	ON	ON	OFF
indirizzo 439	OFF	ON	OFF	ON	ON	ON	ON	OFF	ON	ON	OFF	ON	ON	OFF
indirizzo 440	OFF	ON	OFF	ON	OFF	OFF	OFF	ON	ON	ON	OFF	ON	ON	OFF
indirizzo 441	OFF	ON	OFF	ON	ON	OFF	OFF	ON	ON	ON	OFF	ON	ON	OFF
indirizzo 442	OFF	ON	OFF	ON	OFF	ON	OFF	ON	ON	ON	OFF	ON	ON	OFF
indirizzo 443	OFF	ON	OFF	ON	ON	ON	OFF	ON	ON	ON	OFF	ON	ON	OFF
indirizzo 444	OFF	ON	OFF	ON	OFF	OFF	ON	ON	ON	ON	OFF	ON	ON	OFF
indirizzo 445	OFF	ON	OFF	ON	ON	OFF	ON	ON	ON	ON	OFF	ON	ON	OFF
indirizzo 446	OFF	ON	OFF	ON	OFF	ON	ON	ON	ON	ON	OFF	ON	ON	OFF
indirizzo 447	OFF	ON	OFF	ON	ON	ON	ON	ON	ON	ON	OFF	ON	ON	OFF
indirizzo 448	OFF	ON	OFF	ON	OFF	OFF	OFF	OFF	OFF	OFF	ON	ON	ON	OFF
indirizzo 449	OFF	ON	OFF	ON	ON	OFF	OFF	OFF	OFF	OFF	ON	ON	ON	OFF
indirizzo 450	OFF	ON	OFF	ON	OFF	ON	OFF	OFF	OFF	OFF	ON	ON	ON	OFF
indirizzo 451	OFF	ON	OFF	ON	ON	ON	OFF	OFF	OFF	OFF	ON	ON	ON	OFF
indirizzo 452	OFF	ON	OFF	ON	OFF	OFF	ON	OFF	OFF	OFF	ON	ON	ON	OFF
indirizzo 453	OFF	ON	OFF	ON	ON	OFF	ON	OFF	OFF	OFF	ON	ON	ON	OFF
indirizzo 454	OFF	ON	OFF	ON	OFF	ON	ON	OFF	OFF	OFF	ON	ON	ON	OFF
indirizzo 455	OFF	ON	OFF	ON	ON	ON	ON	OFF	OFF	OFF	ON	ON	ON	OFF
indirizzo 456	OFF	ON	OFF	ON	OFF	OFF	OFF	ON	OFF	OFF	ON	ON	ON	OFF
indirizzo 457	OFF	ON	OFF	ON	ON	OFF	OFF	ON	OFF	OFF	ON	ON	ON	OFF
indirizzo 458	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	OFF	ON	ON	ON	OFF
indirizzo 459	OFF	ON	OFF	ON	ON	ON	OFF	ON	OFF	OFF	ON	ON	ON	OFF
indirizzo 460	OFF	ON	OFF	ON	OFF	OFF	ON	ON	OFF	OFF	ON	ON	ON	OFF
indirizzo 461	OFF	ON	OFF	ON	ON	OFF	ON	ON	OFF	OFF	ON	ON	ON	OFF
indirizzo 462	OFF	ON	OFF	ON	OFF	ON	ON	ON	OFF	OFF	ON	ON	ON	OFF
indirizzo 463	OFF	ON	OFF	ON	ON	ON	ON	ON	OFF	OFF	ON	ON	ON	OFF
indirizzo 464	OFF	ON	OFF	ON	OFF	OFF	OFF	OFF	ON	OFF	ON	ON	ON	OFF
indirizzo 465	OFF	ON	OFF	ON	ON	OFF	OFF	OFF	ON	OFF	ON	ON	ON	OFF
indirizzo 466	OFF	ON	OFF	ON	OFF	ON	OFF	OFF	ON	OFF	ON	ON	ON	OFF
indirizzo 467	OFF	ON	OFF	ON	ON	ON	OFF	OFF	ON	OFF	ON	ON	ON	OFF
indirizzo 468	OFF	ON	OFF	ON	OFF	OFF	ON	OFF	ON	OFF	ON	ON	ON	OFF
indirizzo 469	OFF	ON	OFF	ON	ON	OFF	ON	OFF	ON	OFF	ON	ON	ON	OFF
indirizzo 470	OFF	ON	OFF	ON	OFF	ON	ON	OFF	ON	OFF	ON	ON	ON	OFF
indirizzo 471	OFF	ON	OFF	ON	ON	ON	ON	OFF	ON	OFF	ON	ON	ON	OFF
indirizzo 472	OFF	ON	OFF	ON	OFF	OFF	OFF	ON	ON	OFF	ON	ON	ON	OFF
indirizzo 473	OFF	ON	OFF	ON	ON	OFF	OFF	ON	ON	OFF	ON	ON	ON	OFF

INDIRIZZO DMX														
CONFIGURAZIONI	A	B	C	D	1	2	3	4	5	6	7	8	9	10
indirizzo 474	OFF	ON	OFF	ON	OFF	ON	OFF	ON	ON	OFF	ON	ON	ON	OFF
indirizzo 475	OFF	ON	OFF	ON	ON	ON	OFF	ON	ON	OFF	ON	ON	ON	OFF
indirizzo 476	OFF	ON	OFF	ON	OFF	OFF	ON	ON	ON	OFF	ON	ON	ON	OFF
indirizzo 477	OFF	ON	OFF	ON	ON	OFF	ON	ON	ON	OFF	ON	ON	ON	OFF
indirizzo 478	OFF	ON	OFF	ON	OFF	ON	ON	ON	ON	OFF	ON	ON	ON	OFF
indirizzo 479	OFF	ON	OFF	ON	ON	ON	ON	ON	ON	OFF	ON	ON	ON	OFF
indirizzo 480	OFF	ON	OFF	ON	OFF	OFF	OFF	OFF	OFF	ON	ON	ON	ON	OFF
indirizzo 481	OFF	ON	OFF	ON	ON	OFF	OFF	OFF	OFF	ON	ON	ON	ON	OFF
indirizzo 482	OFF	ON	OFF	ON	OFF	ON	OFF	OFF	OFF	ON	ON	ON	ON	OFF
indirizzo 483	OFF	ON	OFF	ON	ON	ON	OFF	OFF	OFF	ON	ON	ON	ON	OFF
indirizzo 484	OFF	ON	OFF	ON	OFF	OFF	ON	OFF	OFF	ON	ON	ON	ON	OFF
indirizzo 485	OFF	ON	OFF	ON	ON	OFF	ON	OFF	OFF	ON	ON	ON	ON	OFF
indirizzo 486	OFF	ON	OFF	ON	OFF	ON	ON	OFF	OFF	ON	ON	ON	ON	OFF
indirizzo 487	OFF	ON	OFF	ON	ON	ON	ON	OFF	OFF	ON	ON	ON	ON	OFF
indirizzo 488	OFF	ON	OFF	ON	OFF	OFF	OFF	ON	OFF	ON	ON	ON	ON	OFF
indirizzo 489	OFF	ON	OFF	ON	ON	OFF	OFF	ON	OFF	ON	ON	ON	ON	OFF
indirizzo 490	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	ON	ON	ON	OFF
indirizzo 491	OFF	ON	OFF	ON	ON	ON	OFF	ON	OFF	ON	ON	ON	ON	OFF
indirizzo 492	OFF	ON	OFF	ON	OFF	OFF	ON	ON	OFF	ON	ON	ON	ON	OFF
indirizzo 493	OFF	ON	OFF	ON	ON	OFF	ON	ON	OFF	ON	ON	ON	ON	OFF
indirizzo 494	OFF	ON	OFF	ON	OFF	ON	ON	ON	OFF	ON	ON	ON	ON	OFF
indirizzo 495	OFF	ON	OFF	ON	ON	ON	ON	ON	OFF	ON	ON	ON	ON	OFF
indirizzo 496	OFF	ON	OFF	ON	OFF	OFF	OFF	OFF	ON	ON	ON	ON	ON	OFF
indirizzo 497	OFF	ON	OFF	ON	ON	OFF	OFF	OFF	ON	ON	ON	ON	ON	OFF
indirizzo 498	OFF	ON	OFF	ON	OFF	ON	OFF	OFF	ON	ON	ON	ON	ON	OFF
indirizzo 499	OFF	ON	OFF	ON	ON	ON	OFF	OFF	ON	ON	ON	ON	ON	OFF
indirizzo 500	OFF	ON	OFF	ON	OFF	OFF	ON	OFF	ON	ON	ON	ON	ON	OFF
indirizzo 501	OFF	ON	OFF	ON	ON	OFF	ON	OFF	ON	ON	ON	ON	ON	OFF
indirizzo 502	OFF	ON	OFF	ON	OFF	ON	ON	OFF	ON	ON	ON	ON	ON	OFF
indirizzo 503	OFF	ON	OFF	ON	ON	ON	ON	OFF	ON	ON	ON	ON	ON	OFF
indirizzo 504	OFF	ON	OFF	ON	OFF	OFF	OFF	ON	ON	ON	ON	ON	ON	OFF
indirizzo 505	OFF	ON	OFF	ON	ON	OFF	OFF	ON	ON	ON	ON	ON	ON	OFF
indirizzo 506	OFF	ON	OFF	ON	OFF	ON	OFF	ON	ON	ON	ON	ON	ON	OFF
indirizzo 507	OFF	ON	OFF	ON	ON	ON	OFF	ON	ON	ON	ON	ON	ON	OFF
indirizzo 508	OFF	ON	OFF	ON	OFF	OFF	ON	ON	ON	ON	ON	ON	ON	OFF
indirizzo 509	OFF	ON	OFF	ON	ON	OFF	ON	ON	ON	ON	ON	ON	ON	OFF
indirizzo 510	OFF	ON	OFF	ON	OFF	ON	ON	ON	ON	ON	ON	ON	ON	OFF
indirizzo 511	OFF	ON	OFF	ON	ON	ON	ON	ON	ON	ON	ON	ON	ON	OFF
indirizzo 512	OFF	ON	OFF	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON

LUMINOSITÀ MINIMA (0/255)														
CONFIGURAZIONI	A	B	C	D	1	2	3	4	5	6	7	8	9	10
Liv dimming 0	OFF	ON	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
Liv dimming 1	OFF	ON	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON
Liv dimming 2	OFF	ON	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF
Liv dimming 3	OFF	ON	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	ON
Liv dimming 4	OFF	ON	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF
Liv dimming 5	OFF	ON	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF	ON
Liv dimming 6	OFF	ON	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	ON	OFF
Liv dimming 7	OFF	ON	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	ON	ON
Liv dimming 8	OFF	ON	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF	OFF
Liv dimming 9	OFF	ON	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF	ON
Liv dimming 10	OFF	ON	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF	ON	OFF
Liv dimming 11	OFF	ON	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF	ON	ON
Liv dimming 12	OFF	ON	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF	ON	ON	OFF	OFF
Liv dimming 13	OFF	ON	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF	ON	ON	OFF	ON
Liv dimming 14	OFF	ON	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF	ON	ON	ON	OFF
Liv dimming 15	OFF	ON	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF	ON	ON	ON	ON
Liv dimming 16	OFF	ON	ON	ON	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF	OFF	OFF
Liv dimming 17	OFF	ON	ON	ON	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF	OFF	ON
Liv dimming 18	OFF	ON	ON	ON	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF	ON	OFF
Liv dimming 19	OFF	ON	ON	ON	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF	ON	ON
Liv dimming 20	OFF	ON	ON	ON	OFF	OFF	OFF	OFF	OFF	ON	OFF	ON	OFF	OFF
Liv dimming 21	OFF	ON	ON	ON	OFF	OFF	OFF	OFF	OFF	ON	OFF	ON	OFF	ON
Liv dimming 22	OFF	ON	ON	ON	OFF	OFF	OFF	OFF	OFF	ON	OFF	ON	ON	OFF
Liv dimming 23	OFF	ON	ON	ON	OFF	OFF	OFF	OFF	OFF	ON	OFF	ON	ON	ON
Liv dimming 24	OFF	ON	ON	ON	OFF	OFF	OFF	OFF	OFF	ON	ON	OFF	OFF	OFF
Liv dimming 25	OFF	ON	ON	ON	OFF	OFF	OFF	OFF	OFF	ON	ON	OFF	OFF	ON
Liv dimming 26	OFF	ON	ON	ON	OFF	OFF	OFF	OFF	OFF	ON	ON	OFF	ON	OFF
Liv dimming 27	OFF	ON	ON	ON	OFF	OFF	OFF	OFF	OFF	ON	ON	OFF	ON	ON
Liv dimming 28	OFF	ON	ON	ON	OFF	OFF	OFF	OFF	OFF	ON	ON	ON	OFF	OFF
Liv dimming 29	OFF	ON	ON	ON	OFF	OFF	OFF	OFF	OFF	ON	ON	ON	OFF	ON
Liv dimming 30	OFF	ON	ON	ON	OFF	OFF	OFF	OFF	OFF	ON	ON	ON	ON	OFF
Liv dimming 31	OFF	ON	ON	ON	OFF	OFF	OFF	OFF	OFF	ON	ON	ON	ON	ON
Liv dimming 32	OFF	ON	ON	ON	OFF	OFF	OFF	OFF	ON	OFF	OFF	OFF	OFF	OFF
Liv dimming 33	OFF	ON	ON	ON	OFF	OFF	OFF	OFF	ON	OFF	OFF	OFF	OFF	ON
Liv dimming 34	OFF	ON	ON	ON	OFF	OFF	OFF	OFF	ON	OFF	OFF	OFF	ON	OFF
Liv dimming 35	OFF	ON	ON	ON	OFF	OFF	OFF	OFF	ON	OFF	OFF	OFF	ON	ON
Liv dimming 36	OFF	ON	ON	ON	OFF	OFF	OFF	OFF	ON	OFF	OFF	ON	OFF	OFF
Liv dimming 37	OFF	ON	ON	ON	OFF	OFF	OFF	OFF	ON	OFF	OFF	ON	OFF	ON
Liv dimming 38	OFF	ON	ON	ON	OFF	OFF	OFF	OFF	ON	OFF	OFF	ON	ON	OFF
Liv dimming 39	OFF	ON	ON	ON	OFF	OFF	OFF	OFF	ON	OFF	OFF	ON	ON	ON
Liv dimming 40	OFF	ON	ON	ON	OFF	OFF	OFF	OFF	ON	OFF	ON	OFF	OFF	OFF
Liv dimming 41	OFF	ON	ON	ON	OFF	OFF	OFF	OFF	ON	OFF	ON	OFF	OFF	ON
Liv dimming 42	OFF	ON	ON	ON	OFF	OFF	OFF	OFF	ON	OFF	ON	OFF	ON	OFF

LUMINOSITÀ MINIMA (0/255)														
CONFIGURAZIONI	A	B	C	D	1	2	3	4	5	6	7	8	9	10
Liv dimming 43	OFF	ON	ON	ON	OFF	OFF	OFF	OFF	ON	OFF	ON	OFF	ON	ON
Liv dimming 44	OFF	ON	ON	ON	OFF	OFF	OFF	OFF	ON	OFF	ON	ON	OFF	OFF
Liv dimming 45	OFF	ON	ON	ON	OFF	OFF	OFF	OFF	ON	OFF	ON	ON	OFF	ON
Liv dimming 46	OFF	ON	ON	ON	OFF	OFF	OFF	OFF	ON	OFF	ON	ON	ON	OFF
Liv dimming 47	OFF	ON	ON	ON	OFF	OFF	OFF	OFF	ON	OFF	ON	ON	ON	ON
Liv dimming 48	OFF	ON	ON	ON	OFF	OFF	OFF	OFF	ON	ON	OFF	OFF	OFF	OFF
Liv dimming 49	OFF	ON	ON	ON	OFF	OFF	OFF	OFF	ON	ON	OFF	OFF	OFF	ON
Liv dimming 50	OFF	ON	ON	ON	OFF	OFF	OFF	OFF	ON	ON	OFF	OFF	ON	OFF
Liv dimming 51	OFF	ON	ON	ON	OFF	OFF	OFF	OFF	ON	ON	OFF	OFF	ON	ON
Liv dimming 52	OFF	ON	ON	ON	OFF	OFF	OFF	OFF	ON	ON	OFF	ON	OFF	OFF
Liv dimming 53	OFF	ON	ON	ON	OFF	OFF	OFF	OFF	ON	ON	OFF	ON	OFF	ON
Liv dimming 54	OFF	ON	ON	ON	OFF	OFF	OFF	OFF	ON	ON	OFF	ON	ON	OFF
Liv dimming 55	OFF	ON	ON	ON	OFF	OFF	OFF	OFF	ON	ON	OFF	ON	ON	ON
Liv dimming 56	OFF	ON	ON	ON	OFF	OFF	OFF	OFF	ON	ON	ON	OFF	OFF	OFF
Liv dimming 57	OFF	ON	ON	ON	OFF	OFF	OFF	OFF	ON	ON	ON	OFF	OFF	ON
Liv dimming 58	OFF	ON	ON	ON	OFF	OFF	OFF	OFF	ON	ON	ON	OFF	ON	OFF
Liv dimming 59	OFF	ON	ON	ON	OFF	OFF	OFF	OFF	ON	ON	ON	OFF	ON	ON
Liv dimming 60	OFF	ON	ON	ON	OFF	OFF	OFF	OFF	ON	ON	ON	ON	OFF	OFF
Liv dimming 61	OFF	ON	ON	ON	OFF	OFF	OFF	OFF	ON	ON	ON	ON	OFF	ON
Liv dimming 62	OFF	ON	ON	ON	OFF	OFF	OFF	OFF	ON	ON	ON	ON	ON	OFF
Liv dimming 63	OFF	ON	ON	ON	OFF	OFF	OFF	OFF	ON	ON	ON	ON	ON	ON
Liv dimming 64	OFF	ON	ON	ON	OFF	OFF	OFF	ON	OFF	OFF	OFF	OFF	OFF	OFF
Liv dimming 65	OFF	ON	ON	ON	OFF	OFF	OFF	ON	OFF	OFF	OFF	OFF	OFF	ON
Liv dimming 66	OFF	ON	ON	ON	OFF	OFF	OFF	ON	OFF	OFF	OFF	OFF	ON	OFF
Liv dimming 67	OFF	ON	ON	ON	OFF	OFF	OFF	ON	OFF	OFF	OFF	OFF	ON	ON
Liv dimming 68	OFF	ON	ON	ON	OFF	OFF	OFF	ON	OFF	OFF	OFF	ON	OFF	OFF
Liv dimming 69	OFF	ON	ON	ON	OFF	OFF	OFF	ON	OFF	OFF	OFF	ON	OFF	ON
Liv dimming 70	OFF	ON	ON	ON	OFF	OFF	OFF	ON	OFF	OFF	OFF	ON	ON	OFF
Liv dimming 71	OFF	ON	ON	ON	OFF	OFF	OFF	ON	OFF	OFF	OFF	ON	ON	ON
Liv dimming 72	OFF	ON	ON	ON	OFF	OFF	OFF	ON	OFF	OFF	ON	OFF	OFF	OFF
Liv dimming 73	OFF	ON	ON	ON	OFF	OFF	OFF	ON	OFF	OFF	ON	OFF	OFF	ON
Liv dimming 74	OFF	ON	ON	ON	OFF	OFF	OFF	ON	OFF	OFF	ON	OFF	ON	OFF
Liv dimming 75	OFF	ON	ON	ON	OFF	OFF	OFF	ON	OFF	OFF	ON	OFF	ON	ON
Liv dimming 76	OFF	ON	ON	ON	OFF	OFF	OFF	ON	OFF	OFF	ON	ON	OFF	OFF
Liv dimming 77	OFF	ON	ON	ON	OFF	OFF	OFF	ON	OFF	OFF	ON	ON	OFF	ON
Liv dimming 78	OFF	ON	ON	ON	OFF	OFF	OFF	ON	OFF	OFF	ON	ON	ON	OFF
Liv dimming 79	OFF	ON	ON	ON	OFF	OFF	OFF	ON	OFF	OFF	ON	ON	ON	ON
Liv dimming 80	OFF	ON	ON	ON	OFF	OFF	OFF	ON	OFF	ON	OFF	OFF	OFF	OFF
Liv dimming 81	OFF	ON	ON	ON	OFF	OFF	OFF	ON	OFF	ON	OFF	OFF	OFF	ON
Liv dimming 82	OFF	ON	ON	ON	OFF	OFF	OFF	ON	OFF	ON	OFF	OFF	ON	OFF
Liv dimming 83	OFF	ON	ON	ON	OFF	OFF	OFF	ON	OFF	ON	OFF	OFF	ON	ON
Liv dimming 84	OFF	ON	ON	ON	OFF	OFF	OFF	ON	OFF	ON	OFF	ON	OFF	OFF
Liv dimming 85	OFF	ON	ON	ON	OFF	OFF	OFF	ON	OFF	ON	OFF	ON	OFF	ON

LUMINOSITÀ MINIMA (0/255)														
CONFIGURAZIONI	A	B	C	D	1	2	3	4	5	6	7	8	9	10
Liv dimming 86	OFF	ON	ON	ON	OFF	OFF	OFF	ON	OFF	ON	OFF	ON	ON	OFF
Liv dimming 87	OFF	ON	ON	ON	OFF	OFF	OFF	ON	OFF	ON	OFF	ON	ON	ON
Liv dimming 88	OFF	ON	ON	ON	OFF	OFF	OFF	ON	OFF	ON	ON	OFF	OFF	OFF
Liv dimming 89	OFF	ON	ON	ON	OFF	OFF	OFF	ON	OFF	ON	ON	OFF	OFF	ON
Liv dimming 90	OFF	ON	ON	ON	OFF	OFF	OFF	ON	OFF	ON	ON	OFF	ON	OFF
Liv dimming 91	OFF	ON	ON	ON	OFF	OFF	OFF	ON	OFF	ON	ON	OFF	ON	ON
Liv dimming 92	OFF	ON	ON	ON	OFF	OFF	OFF	ON	OFF	ON	ON	ON	OFF	OFF
Liv dimming 93	OFF	ON	ON	ON	OFF	OFF	OFF	ON	OFF	ON	ON	ON	OFF	ON
Liv dimming 94	OFF	ON	ON	ON	OFF	OFF	OFF	ON	OFF	ON	ON	ON	ON	OFF
Liv dimming 95	OFF	ON	ON	ON	OFF	OFF	OFF	ON	OFF	ON	ON	ON	ON	ON
Liv dimming 96	OFF	ON	ON	ON	OFF	OFF	OFF	ON	ON	OFF	OFF	OFF	OFF	OFF
Liv dimming 97	OFF	ON	ON	ON	OFF	OFF	OFF	ON	ON	OFF	OFF	OFF	OFF	ON
Liv dimming 98	OFF	ON	ON	ON	OFF	OFF	OFF	ON	ON	OFF	OFF	OFF	ON	OFF
Liv dimming 99	OFF	ON	ON	ON	OFF	OFF	OFF	ON	ON	OFF	OFF	OFF	ON	ON
Liv dimming 100	OFF	ON	ON	ON	OFF	OFF	OFF	ON	ON	OFF	OFF	ON	OFF	OFF
Liv dimming 101	OFF	ON	ON	ON	OFF	OFF	OFF	ON	ON	OFF	OFF	ON	OFF	ON
Liv dimming 102	OFF	ON	ON	ON	OFF	OFF	OFF	ON	ON	OFF	OFF	ON	ON	OFF
Liv dimming 103	OFF	ON	ON	ON	OFF	OFF	OFF	ON	ON	OFF	OFF	ON	ON	ON
Liv dimming 104	OFF	ON	ON	ON	OFF	OFF	OFF	ON	ON	OFF	ON	OFF	OFF	OFF
Liv dimming 105	OFF	ON	ON	ON	OFF	OFF	OFF	ON	ON	OFF	ON	OFF	OFF	ON
Liv dimming 106	OFF	ON	ON	ON	OFF	OFF	OFF	ON	ON	OFF	ON	OFF	ON	OFF
Liv dimming 107	OFF	ON	ON	ON	OFF	OFF	OFF	ON	ON	OFF	ON	OFF	ON	ON
Liv dimming 108	OFF	ON	ON	ON	OFF	OFF	OFF	ON	ON	OFF	ON	ON	OFF	OFF
Liv dimming 109	OFF	ON	ON	ON	OFF	OFF	OFF	ON	ON	OFF	ON	ON	OFF	ON
Liv dimming 110	OFF	ON	ON	ON	OFF	OFF	OFF	ON	ON	OFF	ON	ON	ON	OFF
Liv dimming 111	OFF	ON	ON	ON	OFF	OFF	OFF	ON	ON	OFF	ON	ON	ON	ON
Liv dimming 112	OFF	ON	ON	ON	OFF	OFF	OFF	ON	ON	ON	OFF	OFF	OFF	OFF
Liv dimming 113	OFF	ON	ON	ON	OFF	OFF	OFF	ON	ON	ON	OFF	OFF	OFF	ON
Liv dimming 114	OFF	ON	ON	ON	OFF	OFF	OFF	ON	ON	ON	OFF	OFF	ON	OFF
Liv dimming 115	OFF	ON	ON	ON	OFF	OFF	OFF	ON	ON	ON	OFF	OFF	ON	ON
Liv dimming 116	OFF	ON	ON	ON	OFF	OFF	OFF	ON	ON	ON	OFF	ON	OFF	OFF
Liv dimming 117	OFF	ON	ON	ON	OFF	OFF	OFF	ON	ON	ON	OFF	ON	OFF	ON
Liv dimming 118	OFF	ON	ON	ON	OFF	OFF	OFF	ON	ON	ON	OFF	ON	ON	OFF
Liv dimming 119	OFF	ON	ON	ON	OFF	OFF	OFF	ON	ON	ON	OFF	ON	ON	ON
Liv dimming 120	OFF	ON	ON	ON	OFF	OFF	OFF	ON	ON	ON	ON	OFF	OFF	OFF
Liv dimming 121	OFF	ON	ON	ON	OFF	OFF	OFF	ON	ON	ON	ON	OFF	OFF	ON
Liv dimming 122	OFF	ON	ON	ON	OFF	OFF	OFF	ON	ON	ON	ON	OFF	ON	OFF
Liv dimming 123	OFF	ON	ON	ON	OFF	OFF	OFF	ON	ON	ON	ON	OFF	ON	ON
Liv dimming 124	OFF	ON	ON	ON	OFF	OFF	OFF	ON	ON	ON	ON	ON	OFF	OFF
Liv dimming 125	OFF	ON	ON	ON	OFF	OFF	OFF	ON	ON	ON	ON	ON	OFF	ON
Liv dimming 126	OFF	ON	ON	ON	OFF	OFF	OFF	ON	ON	ON	ON	ON	ON	OFF
Liv dimming 127	OFF	ON	ON	ON	OFF	OFF	OFF	ON	ON	ON	ON	ON	ON	ON
Liv dimming 128	OFF	ON	ON	ON	OFF	OFF	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF

LUMINOSITÀ MINIMA (0/255)														
CONFIGURAZIONI	A	B	C	D	1	2	3	4	5	6	7	8	9	10
Liv dimming 129	OFF	ON	ON	ON	OFF	OFF	ON	OFF	OFF	OFF	OFF	OFF	OFF	ON
Liv dimming 130	OFF	ON	ON	ON	OFF	OFF	ON	OFF	OFF	OFF	OFF	OFF	ON	OFF
Liv dimming 131	OFF	ON	ON	ON	OFF	OFF	ON	OFF	OFF	OFF	OFF	OFF	ON	ON
Liv dimming 132	OFF	ON	ON	ON	OFF	OFF	ON	OFF	OFF	OFF	OFF	ON	OFF	OFF
Liv dimming 133	OFF	ON	ON	ON	OFF	OFF	ON	OFF	OFF	OFF	OFF	ON	OFF	ON
Liv dimming 134	OFF	ON	ON	ON	OFF	OFF	ON	OFF	OFF	OFF	OFF	ON	ON	OFF
Liv dimming 135	OFF	ON	ON	ON	OFF	OFF	ON	OFF	OFF	OFF	OFF	ON	ON	ON
Liv dimming 136	OFF	ON	ON	ON	OFF	OFF	ON	OFF	OFF	OFF	ON	OFF	OFF	OFF
Liv dimming 137	OFF	ON	ON	ON	OFF	OFF	ON	OFF	OFF	OFF	ON	OFF	OFF	ON
Liv dimming 138	OFF	ON	ON	ON	OFF	OFF	ON	OFF	OFF	OFF	ON	OFF	ON	OFF
Liv dimming 139	OFF	ON	ON	ON	OFF	OFF	ON	OFF	OFF	OFF	ON	OFF	ON	ON
Liv dimming 140	OFF	ON	ON	ON	OFF	OFF	ON	OFF	OFF	OFF	ON	ON	OFF	OFF
Liv dimming 141	OFF	ON	ON	ON	OFF	OFF	ON	OFF	OFF	OFF	ON	ON	OFF	ON
Liv dimming 142	OFF	ON	ON	ON	OFF	OFF	ON	OFF	OFF	OFF	ON	ON	ON	OFF
Liv dimming 143	OFF	ON	ON	ON	OFF	OFF	ON	OFF	OFF	OFF	ON	ON	ON	ON
Liv dimming 144	OFF	ON	ON	ON	OFF	OFF	ON	OFF	OFF	ON	OFF	OFF	OFF	OFF
Liv dimming 145	OFF	ON	ON	ON	OFF	OFF	ON	OFF	OFF	ON	OFF	OFF	OFF	ON
Liv dimming 146	OFF	ON	ON	ON	OFF	OFF	ON	OFF	OFF	ON	OFF	OFF	ON	OFF
Liv dimming 147	OFF	ON	ON	ON	OFF	OFF	ON	OFF	OFF	ON	OFF	OFF	ON	ON
Liv dimming 148	OFF	ON	ON	ON	OFF	OFF	ON	OFF	OFF	ON	OFF	ON	OFF	OFF
Liv dimming 149	OFF	ON	ON	ON	OFF	OFF	ON	OFF	OFF	ON	OFF	ON	OFF	ON
Liv dimming 150	OFF	ON	ON	ON	OFF	OFF	ON	OFF	OFF	ON	OFF	ON	ON	OFF
Liv dimming 151	OFF	ON	ON	ON	OFF	OFF	ON	OFF	OFF	ON	OFF	ON	ON	ON
Liv dimming 152	OFF	ON	ON	ON	OFF	OFF	ON	OFF	OFF	ON	ON	OFF	OFF	OFF
Liv dimming 153	OFF	ON	ON	ON	OFF	OFF	ON	OFF	OFF	ON	ON	OFF	OFF	ON
Liv dimming 154	OFF	ON	ON	ON	OFF	OFF	ON	OFF	OFF	ON	ON	OFF	ON	OFF
Liv dimming 155	OFF	ON	ON	ON	OFF	OFF	ON	OFF	OFF	ON	ON	OFF	ON	ON
Liv dimming 156	OFF	ON	ON	ON	OFF	OFF	ON	OFF	OFF	ON	ON	ON	OFF	OFF
Liv dimming 157	OFF	ON	ON	ON	OFF	OFF	ON	OFF	OFF	ON	ON	ON	OFF	ON
Liv dimming 158	OFF	ON	ON	ON	OFF	OFF	ON	OFF	OFF	ON	ON	ON	ON	OFF
Liv dimming 159	OFF	ON	ON	ON	OFF	OFF	ON	OFF	OFF	ON	ON	ON	ON	ON
Liv dimming 160	OFF	ON	ON	ON	OFF	OFF	ON	OFF	ON	OFF	OFF	OFF	OFF	OFF
Liv dimming 161	OFF	ON	ON	ON	OFF	OFF	ON	OFF	ON	OFF	OFF	OFF	OFF	ON
Liv dimming 162	OFF	ON	ON	ON	OFF	OFF	ON	OFF	ON	OFF	OFF	OFF	ON	OFF
Liv dimming 163	OFF	ON	ON	ON	OFF	OFF	ON	OFF	ON	OFF	OFF	OFF	ON	ON
Liv dimming 164	OFF	ON	ON	ON	OFF	OFF	ON	OFF	ON	OFF	OFF	ON	OFF	OFF
Liv dimming 165	OFF	ON	ON	ON	OFF	OFF	ON	OFF	ON	OFF	OFF	ON	OFF	ON
Liv dimming 166	OFF	ON	ON	ON	OFF	OFF	ON	OFF	ON	OFF	OFF	ON	ON	OFF
Liv dimming 167	OFF	ON	ON	ON	OFF	OFF	ON	OFF	ON	OFF	OFF	ON	ON	ON
Liv dimming 168	OFF	ON	ON	ON	OFF	OFF	ON	OFF	ON	OFF	ON	OFF	OFF	OFF
Liv dimming 169	OFF	ON	ON	ON	OFF	OFF	ON	OFF	ON	OFF	ON	OFF	OFF	ON
Liv dimming 170	OFF	ON	ON	ON	OFF	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF
Liv dimming 171	OFF	ON	ON	ON	OFF	OFF	ON	OFF	ON	OFF	ON	OFF	ON	ON

LUMINOSITÀ MINIMA (0/255)														
CONFIGURAZIONI	A	B	C	D	1	2	3	4	5	6	7	8	9	10
Liv dimming 172	OFF	ON	ON	ON	OFF	OFF	ON	OFF	ON	OFF	ON	ON	OFF	OFF
Liv dimming 173	OFF	ON	ON	ON	OFF	OFF	ON	OFF	ON	OFF	ON	ON	OFF	ON
Liv dimming 174	OFF	ON	ON	ON	OFF	OFF	ON	OFF	ON	OFF	ON	ON	ON	OFF
Liv dimming 175	OFF	ON	ON	ON	OFF	OFF	ON	OFF	ON	OFF	ON	ON	ON	ON
Liv dimming 176	OFF	ON	ON	ON	OFF	OFF	ON	OFF	ON	ON	OFF	OFF	OFF	OFF
Liv dimming 177	OFF	ON	ON	ON	OFF	OFF	ON	OFF	ON	ON	OFF	OFF	OFF	ON
Liv dimming 178	OFF	ON	ON	ON	OFF	OFF	ON	OFF	ON	ON	OFF	OFF	ON	OFF
Liv dimming 179	OFF	ON	ON	ON	OFF	OFF	ON	OFF	ON	ON	OFF	OFF	ON	ON
Liv dimming 180	OFF	ON	ON	ON	OFF	OFF	ON	OFF	ON	ON	OFF	ON	OFF	OFF
Liv dimming 181	OFF	ON	ON	ON	OFF	OFF	ON	OFF	ON	ON	OFF	ON	OFF	ON
Liv dimming 182	OFF	ON	ON	ON	OFF	OFF	ON	OFF	ON	ON	OFF	ON	ON	OFF
Liv dimming 183	OFF	ON	ON	ON	OFF	OFF	ON	OFF	ON	ON	OFF	ON	ON	ON
Liv dimming 184	OFF	ON	ON	ON	OFF	OFF	ON	OFF	ON	ON	ON	OFF	OFF	OFF
Liv dimming 185	OFF	ON	ON	ON	OFF	OFF	ON	OFF	ON	ON	ON	OFF	OFF	ON
Liv dimming 186	OFF	ON	ON	ON	OFF	OFF	ON	OFF	ON	ON	ON	OFF	ON	OFF
Liv dimming 187	OFF	ON	ON	ON	OFF	OFF	ON	OFF	ON	ON	ON	OFF	ON	ON
Liv dimming 188	OFF	ON	ON	ON	OFF	OFF	ON	OFF	ON	ON	ON	ON	OFF	OFF
Liv dimming 189	OFF	ON	ON	ON	OFF	OFF	ON	OFF	ON	ON	ON	ON	OFF	ON
Liv dimming 190	OFF	ON	ON	ON	OFF	OFF	ON	OFF	ON	ON	ON	ON	ON	OFF
Liv dimming 191	OFF	ON	ON	ON	OFF	OFF	ON	OFF	ON	ON	ON	ON	ON	ON
Liv dimming 192	OFF	ON	ON	ON	OFF	OFF	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF
Liv dimming 193	OFF	ON	ON	ON	OFF	OFF	ON	ON	OFF	OFF	OFF	OFF	OFF	ON
Liv dimming 194	OFF	ON	ON	ON	OFF	OFF	ON	ON	OFF	OFF	OFF	OFF	ON	OFF
Liv dimming 195	OFF	ON	ON	ON	OFF	OFF	ON	ON	OFF	OFF	OFF	OFF	ON	ON
Liv dimming 196	OFF	ON	ON	ON	OFF	OFF	ON	ON	OFF	OFF	OFF	ON	OFF	OFF
Liv dimming 197	OFF	ON	ON	ON	OFF	OFF	ON	ON	OFF	OFF	OFF	ON	OFF	ON
Liv dimming 198	OFF	ON	ON	ON	OFF	OFF	ON	ON	OFF	OFF	OFF	ON	ON	OFF
Liv dimming 199	OFF	ON	ON	ON	OFF	OFF	ON	ON	OFF	OFF	OFF	ON	ON	ON
Liv dimming 200	OFF	ON	ON	ON	OFF	OFF	ON	ON	OFF	OFF	ON	OFF	OFF	OFF
Liv dimming 201	OFF	ON	ON	ON	OFF	OFF	ON	ON	OFF	OFF	ON	OFF	OFF	ON
Liv dimming 202	OFF	ON	ON	ON	OFF	OFF	ON	ON	OFF	OFF	ON	OFF	ON	OFF
Liv dimming 203	OFF	ON	ON	ON	OFF	OFF	ON	ON	OFF	OFF	ON	OFF	ON	ON
Liv dimming 204	OFF	ON	ON	ON	OFF	OFF	ON	ON	OFF	OFF	ON	ON	OFF	OFF
Liv dimming 205	OFF	ON	ON	ON	OFF	OFF	ON	ON	OFF	OFF	ON	ON	OFF	ON
Liv dimming 206	OFF	ON	ON	ON	OFF	OFF	ON	ON	OFF	OFF	ON	ON	ON	OFF
Liv dimming 207	OFF	ON	ON	ON	OFF	OFF	ON	ON	OFF	OFF	ON	ON	ON	ON
Liv dimming 208	OFF	ON	ON	ON	OFF	OFF	ON	ON	OFF	ON	OFF	OFF	OFF	OFF
Liv dimming 209	OFF	ON	ON	ON	OFF	OFF	ON	ON	OFF	ON	OFF	OFF	OFF	ON
Liv dimming 210	OFF	ON	ON	ON	OFF	OFF	ON	ON	OFF	ON	OFF	OFF	ON	OFF
Liv dimming 211	OFF	ON	ON	ON	OFF	OFF	ON	ON	OFF	ON	OFF	OFF	ON	ON
Liv dimming 212	OFF	ON	ON	ON	OFF	OFF	ON	ON	OFF	ON	OFF	ON	OFF	OFF
Liv dimming 213	OFF	ON	ON	ON	OFF	OFF	ON	ON	OFF	ON	OFF	ON	OFF	ON
Liv dimming 214	OFF	ON	ON	ON	OFF	OFF	ON	ON	OFF	ON	OFF	ON	ON	OFF

LUMINOSITÀ MINIMA (0/255)														
CONFIGURAZIONI	A	B	C	D	1	2	3	4	5	6	7	8	9	10
Liv dimming 215	OFF	ON	ON	ON	OFF	OFF	ON	ON	OFF	ON	OFF	ON	ON	ON
Liv dimming 216	OFF	ON	ON	ON	OFF	OFF	ON	ON	OFF	ON	ON	OFF	OFF	OFF
Liv dimming 217	OFF	ON	ON	ON	OFF	OFF	ON	ON	OFF	ON	ON	OFF	OFF	ON
Liv dimming 218	OFF	ON	ON	ON	OFF	OFF	ON	ON	OFF	ON	ON	OFF	ON	OFF
Liv dimming 219	OFF	ON	ON	ON	OFF	OFF	ON	ON	OFF	ON	ON	OFF	ON	ON
Liv dimming 220	OFF	ON	ON	ON	OFF	OFF	ON	ON	OFF	ON	ON	ON	OFF	OFF
Liv dimming 221	OFF	ON	ON	ON	OFF	OFF	ON	ON	OFF	ON	ON	ON	OFF	ON
Liv dimming 222	OFF	ON	ON	ON	OFF	OFF	ON	ON	OFF	ON	ON	ON	ON	OFF
Liv dimming 223	OFF	ON	ON	ON	OFF	OFF	ON	ON	OFF	ON	ON	ON	ON	ON
Liv dimming 224	OFF	ON	ON	ON	OFF	OFF	ON	ON	ON	OFF	OFF	OFF	OFF	OFF
Liv dimming 225	OFF	ON	ON	ON	OFF	OFF	ON	ON	ON	OFF	OFF	OFF	OFF	ON
Liv dimming 226	OFF	ON	ON	ON	OFF	OFF	ON	ON	ON	OFF	OFF	OFF	ON	OFF
Liv dimming 227	OFF	ON	ON	ON	OFF	OFF	ON	ON	ON	OFF	OFF	OFF	ON	ON
Liv dimming 228	OFF	ON	ON	ON	OFF	OFF	ON	ON	ON	OFF	OFF	ON	OFF	OFF
Liv dimming 229	OFF	ON	ON	ON	OFF	OFF	ON	ON	ON	OFF	OFF	ON	OFF	ON
Liv dimming 230	OFF	ON	ON	ON	OFF	OFF	ON	ON	ON	OFF	OFF	ON	ON	OFF
Liv dimming 231	OFF	ON	ON	ON	OFF	OFF	ON	ON	ON	OFF	OFF	ON	ON	ON
Liv dimming 232	OFF	ON	ON	ON	OFF	OFF	ON	ON	ON	OFF	ON	OFF	OFF	OFF
Liv dimming 233	OFF	ON	ON	ON	OFF	OFF	ON	ON	ON	OFF	ON	OFF	OFF	ON
Liv dimming 234	OFF	ON	ON	ON	OFF	OFF	ON	ON	ON	OFF	ON	OFF	ON	OFF
Liv dimming 235	OFF	ON	ON	ON	OFF	OFF	ON	ON	ON	OFF	ON	OFF	ON	ON
Liv dimming 236	OFF	ON	ON	ON	OFF	OFF	ON	ON	ON	OFF	ON	ON	OFF	OFF
Liv dimming 237	OFF	ON	ON	ON	OFF	OFF	ON	ON	ON	OFF	ON	ON	OFF	ON
Liv dimming 238	OFF	ON	ON	ON	OFF	OFF	ON	ON	ON	OFF	ON	ON	ON	OFF
Liv dimming 239	OFF	ON	ON	ON	OFF	OFF	ON	ON	ON	OFF	ON	ON	ON	ON
Liv dimming 240	OFF	ON	ON	ON	OFF	OFF	ON	ON	ON	ON	OFF	OFF	OFF	OFF
Liv dimming 241	OFF	ON	ON	ON	OFF	OFF	ON	ON	ON	ON	OFF	OFF	OFF	ON
Liv dimming 242	OFF	ON	ON	ON	OFF	OFF	ON	ON	ON	ON	OFF	OFF	ON	OFF
Liv dimming 243	OFF	ON	ON	ON	OFF	OFF	ON	ON	ON	ON	OFF	OFF	ON	ON
Liv dimming 244	OFF	ON	ON	ON	OFF	OFF	ON	ON	ON	ON	OFF	ON	OFF	OFF
Liv dimming 245	OFF	ON	ON	ON	OFF	OFF	ON	ON	ON	ON	OFF	ON	OFF	ON
Liv dimming 246	OFF	ON	ON	ON	OFF	OFF	ON	ON	ON	ON	OFF	ON	ON	OFF
Liv dimming 247	OFF	ON	ON	ON	OFF	OFF	ON	ON	ON	ON	OFF	ON	ON	ON
Liv dimming 248	OFF	ON	ON	ON	OFF	OFF	ON	ON	ON	ON	ON	OFF	OFF	OFF
Liv dimming 249	OFF	ON	ON	ON	OFF	OFF	ON	ON	ON	ON	ON	OFF	OFF	ON
Liv dimming 250	OFF	ON	ON	ON	OFF	OFF	ON	ON	ON	ON	ON	OFF	ON	OFF
Liv dimming 251	OFF	ON	ON	ON	OFF	OFF	ON	ON	ON	ON	ON	OFF	ON	ON
Liv dimming 252	OFF	ON	ON	ON	OFF	OFF	ON	ON	ON	ON	ON	ON	OFF	OFF
Liv dimming 253	OFF	ON	ON	ON	OFF	OFF	ON	ON	ON	ON	ON	ON	OFF	ON
Liv dimming 254	OFF	ON	ON	ON	OFF	OFF	ON	ON	ON	ON	ON	ON	ON	OFF

TEMPO DI ACCENSIONE														
CONFIGURAZIONI	A	B	C	D	1	2	3	4	5	6	7	8	9	10
0 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
1 minuto	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON
2 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF
3 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	ON
4 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF
5 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF	ON
6 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	ON	OFF
7 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	ON	ON
8 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF	OFF
9 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF	ON
10 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF	ON	OFF
11 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF	ON	ON
12 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	ON	OFF	OFF
13 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	ON	OFF	ON
14 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	ON	ON	OFF
15 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	ON	ON	ON
16 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF	OFF	OFF
17 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF	OFF	ON
18 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF	ON	OFF
19 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF	ON	ON
20 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF	ON	OFF	OFF
21 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF	ON	OFF	ON
22 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF	ON	ON	OFF
23 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF	ON	ON	ON
24 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	ON	OFF	OFF	OFF
25 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	ON	OFF	OFF	ON
26 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	ON	OFF	ON	OFF
27 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	ON	OFF	ON	ON
28 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	ON	ON	OFF	OFF
29 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	ON	ON	OFF	ON
30 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	ON	ON	ON	OFF
31 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	ON	ON	ON	ON
32 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF	OFF	OFF	OFF
33 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF	OFF	OFF	ON
34 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF	OFF	ON	OFF
35 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF	OFF	ON	ON
36 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF	ON	OFF	OFF
37 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF	ON	OFF	ON
38 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF	ON	ON	OFF
39 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF	ON	ON	ON
40 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF	ON	OFF	OFF	OFF
41 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF	ON	OFF	OFF	ON
42 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF	ON	OFF	ON	OFF

TEMPO DI ACCENSIONE														
CONFIGURAZIONI	A	B	C	D	1	2	3	4	5	6	7	8	9	10
43 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF	ON	OFF	ON	ON
44 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF	ON	ON	OFF	OFF
45 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF	ON	ON	OFF	ON
46 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF	ON	ON	ON	OFF
47 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF	ON	ON	ON	ON
48 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	ON	OFF	OFF	OFF	OFF
49 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	ON	OFF	OFF	OFF	ON
50 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	ON	OFF	OFF	ON	OFF
51 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	ON	OFF	OFF	ON	ON
52 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	ON	OFF	ON	OFF	OFF
53 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	ON	OFF	ON	OFF	ON
54 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	ON	OFF	ON	ON	OFF
55 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	ON	OFF	ON	ON	ON
56 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	ON	ON	OFF	OFF	OFF
57 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	ON	ON	OFF	OFF	ON
58 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	ON	ON	OFF	ON	OFF
59 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	ON	ON	OFF	ON	ON
60 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	ON	ON	ON	OFF	OFF
61 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	ON	ON	ON	OFF	ON
62 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	ON	ON	ON	ON	OFF
63 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	ON	ON	ON	ON	ON
64 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF	OFF	OFF	OFF	OFF
65 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF	OFF	OFF	OFF	ON
66 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF	OFF	OFF	ON	OFF
67 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF	OFF	OFF	ON	ON
68 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF	OFF	ON	OFF	OFF
69 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF	OFF	ON	OFF	ON
70 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF	OFF	ON	ON	OFF
71 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF	OFF	ON	ON	ON
72 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF	ON	OFF	OFF	OFF
73 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF	ON	OFF	OFF	ON
74 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF	ON	OFF	ON	OFF
75 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF	ON	OFF	ON	ON
76 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF	ON	ON	OFF	OFF
77 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF	ON	ON	OFF	ON
78 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF	ON	ON	ON	OFF
79 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF	ON	ON	ON	ON
80 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF	ON	OFF	OFF	OFF	OFF
81 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF	ON	OFF	OFF	OFF	ON
82 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF	ON	OFF	OFF	ON	OFF
83 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF	ON	OFF	OFF	ON	ON
84 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF	ON	OFF	ON	OFF	OFF
85 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF	ON	OFF	ON	OFF	ON

TEMPO DI ACCENSIONE														
CONFIGURAZIONI	A	B	C	D	1	2	3	4	5	6	7	8	9	10
86 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF	ON	OFF	ON	ON	OFF
87 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF	ON	OFF	ON	ON	ON
88 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF	ON	ON	OFF	OFF	OFF
89 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF	ON	ON	OFF	OFF	ON
90 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF	ON	ON	OFF	ON	OFF
91 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF	ON	ON	OFF	ON	ON
92 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF	ON	ON	ON	OFF	OFF
93 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF	ON	ON	ON	OFF	ON
94 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF	ON	ON	ON	ON	OFF
95 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF	ON	ON	ON	ON	ON
96 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	ON	ON	OFF	OFF	OFF	OFF	OFF
97 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	ON	ON	OFF	OFF	OFF	OFF	ON
98 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	ON	ON	OFF	OFF	OFF	ON	OFF
99 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	ON	ON	OFF	OFF	OFF	ON	ON
100 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	ON	ON	OFF	OFF	ON	OFF	OFF
101 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	ON	ON	OFF	OFF	ON	OFF	ON
102 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	ON	ON	OFF	OFF	ON	ON	OFF
103 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	ON	ON	OFF	OFF	ON	ON	ON
104 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	ON	ON	OFF	ON	OFF	OFF	OFF
105 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	ON	ON	OFF	ON	OFF	OFF	ON
106 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	ON	ON	OFF	ON	OFF	ON	OFF
107 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	ON	ON	OFF	ON	OFF	ON	ON
108 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	ON	ON	OFF	ON	ON	OFF	OFF
109 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	ON	ON	OFF	ON	ON	OFF	ON
110 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	ON	ON	OFF	ON	ON	ON	OFF
111 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	ON	ON	OFF	ON	ON	ON	ON
112 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	ON	ON	ON	OFF	OFF	OFF	OFF
113 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	ON	ON	ON	OFF	OFF	OFF	ON
114 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	ON	ON	ON	OFF	OFF	ON	OFF
115 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	ON	ON	ON	OFF	OFF	ON	ON
116 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	ON	ON	ON	OFF	ON	OFF	OFF
117 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	ON	ON	ON	OFF	ON	OFF	ON
118 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	ON	ON	ON	OFF	ON	ON	OFF
119 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	ON	ON	ON	OFF	ON	ON	ON
120 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	ON	ON	ON	ON	OFF	OFF	OFF
121 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	ON	ON	ON	ON	OFF	OFF	ON
122 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	ON	ON	ON	ON	OFF	ON	OFF
123 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	ON	ON	ON	ON	OFF	ON	ON
124 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	ON	ON	ON	ON	ON	OFF	OFF
125 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	ON	ON	ON	ON	ON	OFF	ON
126 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	ON	ON	ON	ON	ON	ON	OFF
127 minuti	ON	OFF	OFF	OFF	OFF	OFF	OFF	ON	ON	ON	ON	ON	ON	ON
128 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF

TEMPO DI ACCENSIONE														
CONFIGURAZIONI	A	B	C	D	1	2	3	4	5	6	7	8	9	10
129 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF	OFF	OFF	OFF	OFF	ON
130 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF	OFF	OFF	OFF	ON	OFF
131 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF	OFF	OFF	OFF	ON	ON
132 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF	OFF	OFF	ON	OFF	OFF
133 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF	OFF	OFF	ON	OFF	ON
134 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF	OFF	OFF	ON	ON	OFF
135 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF	OFF	OFF	ON	ON	ON
136 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF	OFF	ON	OFF	OFF	OFF
137 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF	OFF	ON	OFF	OFF	ON
138 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF	OFF	ON	OFF	ON	OFF
139 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF	OFF	ON	OFF	ON	ON
140 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF	OFF	ON	ON	OFF	OFF
141 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF	OFF	ON	ON	OFF	ON
142 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF	OFF	ON	ON	ON	OFF
143 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF	OFF	ON	ON	ON	ON
144 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF	ON	OFF	OFF	OFF	OFF
145 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF	ON	OFF	OFF	OFF	ON
146 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF	ON	OFF	OFF	ON	OFF
147 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF	ON	OFF	OFF	ON	ON
148 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF	ON	OFF	ON	OFF	OFF
149 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF	ON	OFF	ON	OFF	ON
150 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF	ON	OFF	ON	ON	OFF
151 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF	ON	OFF	ON	ON	ON
152 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF	ON	ON	OFF	OFF	OFF
153 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF	ON	ON	OFF	OFF	ON
154 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF	ON	ON	OFF	ON	OFF
155 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF	ON	ON	OFF	ON	ON
156 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF	ON	ON	ON	OFF	OFF
157 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF	ON	ON	ON	OFF	ON
158 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF	ON	ON	ON	ON	OFF
159 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF	ON	ON	ON	ON	ON
160 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	OFF	ON	OFF	OFF	OFF	OFF	OFF
161 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	OFF	ON	OFF	OFF	OFF	OFF	ON
162 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	OFF	ON	OFF	OFF	OFF	ON	OFF
163 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	OFF	ON	OFF	OFF	OFF	ON	ON
164 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	OFF	ON	OFF	OFF	ON	OFF	OFF
165 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	OFF	ON	OFF	OFF	ON	OFF	ON
166 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	OFF	ON	OFF	OFF	ON	ON	OFF
167 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	OFF	ON	OFF	OFF	ON	ON	ON
168 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	OFF	ON	OFF	ON	OFF	OFF	OFF
169 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	OFF	ON	OFF	ON	OFF	OFF	ON
170 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF
171 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	OFF	ON	OFF	ON	OFF	ON	ON

TEMPO DI ACCENSIONE														
CONFIGURAZIONI	A	B	C	D	1	2	3	4	5	6	7	8	9	10
172 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	OFF	ON	OFF	ON	ON	OFF	OFF
173 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	OFF	ON	OFF	ON	ON	OFF	ON
174 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	OFF	ON	OFF	ON	ON	ON	OFF
175 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	OFF	ON	OFF	ON	ON	ON	ON
176 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	OFF	ON	ON	OFF	OFF	OFF	OFF
177 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	OFF	ON	ON	OFF	OFF	OFF	ON
178 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	OFF	ON	ON	OFF	OFF	ON	OFF
179 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	OFF	ON	ON	OFF	OFF	ON	ON
180 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	OFF	ON	ON	OFF	ON	OFF	OFF
181 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	OFF	ON	ON	OFF	ON	OFF	ON
182 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	OFF	ON	ON	OFF	ON	ON	OFF
183 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	OFF	ON	ON	OFF	ON	ON	ON
184 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	OFF	ON	ON	ON	OFF	OFF	OFF
185 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	OFF	ON	ON	ON	OFF	OFF	ON
186 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	OFF	ON	ON	ON	OFF	ON	OFF
187 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	OFF	ON	ON	ON	OFF	ON	ON
188 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	OFF	ON	ON	ON	ON	OFF	OFF
189 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	OFF	ON	ON	ON	ON	OFF	ON
190 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	OFF	ON	ON	ON	ON	ON	OFF
191 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	OFF	ON	ON	ON	ON	ON	ON
192 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF
193 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	ON	OFF	OFF	OFF	OFF	OFF	ON
194 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	ON	OFF	OFF	OFF	OFF	ON	OFF
195 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	ON	OFF	OFF	OFF	OFF	ON	ON
196 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	ON	OFF	OFF	OFF	ON	OFF	OFF
197 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	ON	OFF	OFF	OFF	ON	OFF	ON
198 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	ON	OFF	OFF	OFF	ON	ON	OFF
199 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	ON	OFF	OFF	OFF	ON	ON	ON
200 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	ON	OFF	OFF	ON	OFF	OFF	OFF
201 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	ON	OFF	OFF	ON	OFF	OFF	ON
202 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	ON	OFF	OFF	ON	OFF	ON	OFF
203 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	ON	OFF	OFF	ON	OFF	ON	ON
204 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	ON	OFF	OFF	ON	ON	OFF	OFF
205 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	ON	OFF	OFF	ON	ON	OFF	ON
206 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	ON	OFF	OFF	ON	ON	ON	OFF
207 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	ON	OFF	OFF	ON	ON	ON	ON
208 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	ON	OFF	ON	OFF	OFF	OFF	OFF
209 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	ON	OFF	ON	OFF	OFF	OFF	ON
210 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	ON	OFF	ON	OFF	OFF	ON	OFF
211 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	ON	OFF	ON	OFF	OFF	ON	ON
212 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	ON	OFF	ON	OFF	ON	OFF	OFF
213 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	ON	OFF	ON	OFF	ON	OFF	ON
214 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	ON	OFF	ON	OFF	ON	ON	OFF

TEMPO DI ACCENSIONE														
CONFIGURAZIONI	A	B	C	D	1	2	3	4	5	6	7	8	9	10
215 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	ON	OFF	ON	OFF	ON	ON	ON
216 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	ON	OFF	ON	ON	OFF	OFF	OFF
217 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	ON	OFF	ON	ON	OFF	OFF	ON
218 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	ON	OFF	ON	ON	OFF	ON	OFF
219 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	ON	OFF	ON	ON	OFF	ON	ON
220 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	ON	OFF	ON	ON	ON	OFF	OFF
221 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	ON	OFF	ON	ON	ON	OFF	ON
222 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	ON	OFF	ON	ON	ON	ON	OFF
223 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	ON	OFF	ON	ON	ON	ON	ON
224 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	ON	ON	OFF	OFF	OFF	OFF	OFF
225 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	ON	ON	OFF	OFF	OFF	OFF	ON
226 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	ON	ON	OFF	OFF	OFF	ON	OFF
227 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	ON	ON	OFF	OFF	OFF	ON	ON
228 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	ON	ON	OFF	OFF	ON	OFF	OFF
229 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	ON	ON	OFF	OFF	ON	OFF	ON
230 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	ON	ON	OFF	OFF	ON	ON	OFF
231 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	ON	ON	OFF	OFF	ON	ON	ON
232 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	ON	ON	OFF	ON	OFF	OFF	OFF
233 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	ON	ON	OFF	ON	OFF	OFF	ON
234 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	ON	ON	OFF	ON	OFF	ON	OFF
235 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	ON	ON	OFF	ON	OFF	ON	ON
236 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	ON	ON	OFF	ON	ON	OFF	OFF
237 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	ON	ON	OFF	ON	ON	OFF	ON
238 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	ON	ON	OFF	ON	ON	ON	OFF
239 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	ON	ON	OFF	ON	ON	ON	ON
240 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	ON	ON	ON	OFF	OFF	OFF	OFF
241 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	ON	ON	ON	OFF	OFF	OFF	ON
242 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	ON	ON	ON	OFF	OFF	ON	OFF
243 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	ON	ON	ON	OFF	OFF	ON	ON
244 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	ON	ON	ON	OFF	ON	OFF	OFF
245 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	ON	ON	ON	OFF	ON	OFF	ON
246 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	ON	ON	ON	OFF	ON	ON	OFF
247 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	ON	ON	ON	OFF	ON	ON	ON
248 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	ON	ON	ON	ON	OFF	OFF	OFF
249 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	ON	ON	ON	ON	OFF	OFF	ON
250 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	ON	ON	ON	ON	OFF	ON	OFF
251 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	ON	ON	ON	ON	OFF	ON	ON
252 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	ON	ON	ON	ON	ON	OFF	OFF
253 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	ON	ON	ON	ON	ON	OFF	ON
254 minuti	ON	OFF	OFF	OFF	OFF	OFF	ON	ON	ON	ON	ON	ON	ON	OFF